

DIGITAL SERVO DRIVE FOR BRUSH & BRUSHLESS MOTORS

CONTROL MODES

- Profile Position-Velocity-Torque, Interpolated Position, Homing
- Indexer, Point-to-Point, PVT
- Camming, Gearing

COMMAND INTERFACE

- CANopen
- ASCII and discrete I/O
- Stepper commands
- ±10V position/velocity/torque
- PWM velocity/torque command
- Master encoder (Gearing/Camming)

COMMUNICATIONS

- CANopen
- RS-232

FEEDBACK

Incremental

- Digital quad A/B encoder
- Analog sin/cos encoder
- Panasonic Incremental A
- Aux. encoder / encoder out

Absolute

- SSI
- EnDat 2.1 & 2.2
- Absolute A
- Tamagawa Absolute A
- Panasonic Absolute A Format
- Sanyo Denki Absolute A
- BiSS (B&C)

Other

- Digital Halls

I/O DIGITAL

- 6 High-speed inputs
- 1 Motor over-temp input
- 4 Opto-isolated inputs
- 1 High-speed output
- 3 Opto-isolated outputs
- 1 Opto-isolated motor brake output

I/O ANALOG


- 1 Reference input, 12-bit

SAFE TORQUE OFF (STO)

- SIL 3, Category 3, PL d

DIMENSIONS: IN [MM]

- 7.54 x 4.55 x 2.13 [191.4 x 115.6 x 54.1]

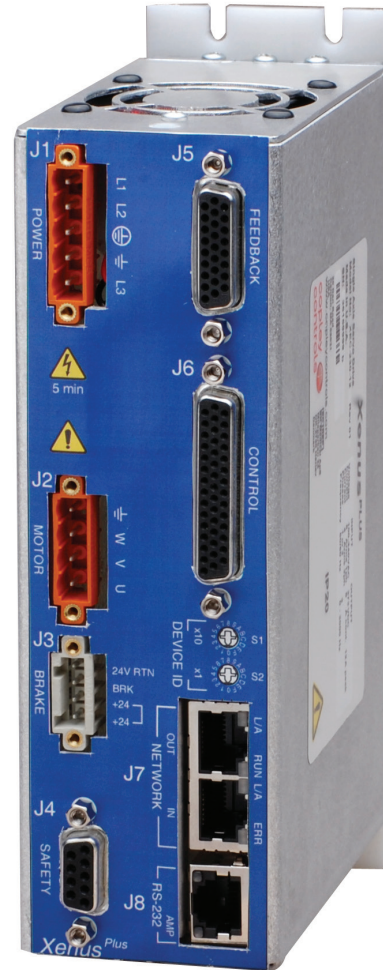

| Model | Ic | Ip | Vac |
|------------|-----|----|---------|
| XPC-230-09 | 3 | 9 | 100~240 |
| XPC-230-12 | 6 | 12 | 100~240 |
| XPC-230-15 | 7.5 | 15 | 100~240 |

DESCRIPTION

XPC sets new levels of performance, connectivity, and flexibility. CANopen communication provides a widely used cost-effective industrial bus. A wide range of absolute encoders are supported.

High resolution A/D converters ensure optimal current loop performance. Both isolated and high-speed non-isolated I/O are provided. For safety critical applications, redundant power stage enable inputs can be employed.

GENERAL SPECIFICATIONS

Test conditions: Wye connected load: 2 mH line-line. Ambient temperature = 25 °C. Power input = 230 Vac, 60 Hz, 1 Ø

| MODEL | XPC-230-09 | XPC-230-12 | XPC-230-15 | |
|---|---|------------|---|-------------------------------|
| OUTPUT CURRENT | | | | |
| Peak Current | 9 (6.4) | 12 (8.5) | 15 (10.6) | Adc (Arms, sinusoidal) |
| Peak time | 1 | 1 | 1 | s |
| Continuous current | 3 (2.12) | 6 (4.24) | 7.5 (5.3) | Adc (Arms, sinusoidal) |
| INPUT POWER | | | | |
| Mains voltage, phase, frequency | 100~240 | 100~240 | 100~240 | Vac, ±10%, 1Ø or 3Ø, 47~63 Hz |
| Maximum Mains Current, (Note 2) | 4.7 | 9.4 | 11.8 | Arms 1Ø |
| | 2.6 | 5.2 | 6.5 | Arms 3Ø |
| +24 Vdc Control power | +20~32 Vdc Required for operation (Note 3) 7.5 W (Typ, no load on +5V outputs), ≤ 18 W, (Max, both +5V outputs @ 500 mA) | | | |
| DIGITAL CONTROL | | | | |
| Digital Control Loops | Current, velocity, position. 100% digital loop control | | | |
| Sampling rate (time) | Current loop: 16 kHz (62.5 µs), Velocity & position loops: 4 kHz (250 µs) | | | |
| Bus voltage compensation | Changes in bus or mains voltage do not affect bandwidth | | | |
| Minimum load inductance | 200 µH line-line | | | |
| Resolution | 12-bit capture of U & V phase currents | | | |
| COMMAND INPUTS | | | | |
| CANopen | Profile Position-Velocity-Torque, Interpolated position, Homing | | | |
| <i>Stand-alone mode</i> | | | | |
| Analog torque, velocity, position reference | ±10 Vdc, 12 bit resolution | | Dedicated differential analog input | |
| Digital position reference | Pulse/Direction, CW/CCW | | Stepper commands (4 MHz maximum rate) | |
| | Quad A/B Encoder | | 2 M line/sec, 8 Mcount/sec (after quadrature) | |
| Digital torque & velocity reference | PWM, Polarity | | PWM = 0% - 100%, Polarity = 1/0 | |
| | PWM 50% | | PWM = 50% ±50%, no polarity signal required | |
| | PWM frequency range | | 1 kHz minimum, 100 kHz maximum | |
| | PWM minimum pulse width | | 220 ns | |
| Indexing | Up to 32 sequences can be launched from inputs or ASCII commands. | | | |
| Camming | Up to 10 CAM tables can be stored in flash memory | | | |
| ASCII | RS-232, 9600~115,200 Baud, 3-wire, RJ-11 connector | | | |
| DIGITAL INPUTS | | | | |
| [IN1,2] | Digital, Schmitt trigger, 1.5 µs RC filter, 24 Vdc compatible, 15 kΩ programmable pull-up/downs to +5 Vdc/ground, Vt+ ≥ 3.15 Vdc, VT- ≤ 1.13 Vdc | | | |
| [IN3,4,5,6] | Programmable as 4 single-ended or 2 differential pairs, 100 ns RC filter, 5 Vdc typical, 12 Vdc max 10 kΩ programmable pull-up/down per input to +5 Vdc/ground, SE: Vin-LO ≤ 2.3 Vdc, Vin-HI ≥ 2.7 Vdc, VH = 45 mV typ, DIFF: Vin-LO ≤ 200 mVdc, Vin-HI ≥ 200 mVdc, VH = 45 mV typ, | | | |
| [IN7,8,9,10] | Opto-isolated, single-ended, ±15~30 Vdc compatible, bi-polar, with common return to +24V or ground Rated impulse ≥ 800 V, Vin-LO ≤ 6.0 Vdc, Vin-HI ≥ 10.0 Vdc, Input current ±3.6 mA @ ±24 Vdc, typical Maximum working voltage with respect to signal ground: 32 Vdc | | | |
| [IN11] | Motor overtemp signal on feedback connector, Schmitt trigger, 24 Vdc compatible 330 µs RC filter, 4.99k pullup to +5 Vdc, Vt+ ≥ 3.15 Vdc, VT- ≤ 1.13 Vdc Programmable for other functions if not used for Motemp | | | |
| ANALOG INPUT | | | | |
| [AIN±] | Differential, ±10 Vdc, 5.06 kΩ input impedance, 12-bit resolution | | | |
| SAFE TORQUE OFF (STO) | | | | |
| Function | PWM outputs are inactive and current to the motor will not be possible when the STO function is asserted | | | |
| Standard | Designed to IEC-61508-1, IEC-61508-2, IEC-61800-5-2, ISO-13849-1 | | | |
| Safety Integrity Level | SIL 3, Category 3, Performance level d | | | |
| Inputs | 2 two-terminal: STO-IN1+, STO-IN1-, STO-IN2+, STO-IN2- | | | |
| Type | Opto-isolators, 24V compatible, Vin-LO ≤ 6.0 Vdc or open, Vin-HI ≥ 15.0 Vdc, | | | |
| Input current (typical) | STO-IN1: 9.0 mA, STO-IN2: 4.5 mA | | | |
| Response time | 2 ms from Vin ≤ 6.0 Vdc to interruption of energy supplied to motor | | | |
| Reference | Xenus Plus Compact STO Manual | | | |
| RS-232 PORT | | | | |
| Signals | RxD, TxD, Gnd in 6-position, 4-contact RJ-11 style modular connector, non-isolated | | | |
| Mode | Full-duplex, DTE serial communication port for drive setup and control, 9,600 to 115,200 baud | | | |
| Protocol | Binary and ASCII formats | | | |
| DIGITAL OUTPUTS | | | | |
| [OUT1~3] | Opto-isolated SSR, two-terminal, 300 mA max, 24 V tolerant, series 1 Ω resistor, 36 V Zener flyback diode Rated impulse ≥ 800 V | | | |
| [OUT4] | High-speed CMOS buffer, +5V max, ±8 mA into 560 Ω (minimum) | | | |
| [OUT5] | Motor brake control: opto-isolated, current-sinking with flyback diode to +24 Vdc, 1 Adc max | | | |
| CAN PORTS | | | | |
| Format | Dual RJ-45 receptacles, isolated from signal ground, max working voltage with respect to signal ground: 32 Vdc | | | |
| Protocol | CANopen CiA-402 | | | |
| 5V OUTPUTS | | | | |
| Number | 2: +5Vout1 on the feedback connector (J5), +5Vout2 on the control connector (J6) for the multi-mode encoder | | | |
| Ratings | +5 Vdc @ 500 mA each output, 1000 mA total for both outputs, thermal and overload protected | | | |

NOTES:

1. Brake output is programmable as motor brake, or as general purpose digital output
2. The actual mains current is dependent on the mains voltage, and motor load and operating conditions. The Maximum Mains Currents shown above occur when the drive is operating from the maximum input voltage and is producing the rated peak and continuous output currents at the maximum output voltage.

GENERAL SPECIFICATIONS

STATUS INDICATORS

| | |
|--------------|---|
| Drive Status | Bicolor LED, drive status indicated by color, and blinking or non-blinking condition |
| NET Status | RUN/ERR LEDs, status of CANopen bus indicated by color and blink codes to CAN Indicator Specification 303-3 |

REGENERATION

| | | |
|-----------------------------|--|--|
| Operation | Solid state switch drives 60 Ω internal regen resistor | |
| Bus Capacitance | 940 μF | |
| Continuous Power Capability | 20 W | |
| Cut-In Voltage | +HV > 390 Vdc ±2 Vdc | Regen output is on, regen resistor is dissipating energy |
| Drop-Out Voltage | +HV < 380 Vdc ±2 Vdc | Regen output is off, regen resistor not dissipating energy |

PROTECTIONS

| | | |
|-----------------------------------|--|--|
| AC Mains Loss | Loss of mains power between L1 & L2 is detected | |
| HV Overvoltage | +HV > 400 Vdc | Drive PWM outputs turn off until +HV is less than 400 Vdc |
| HV Undervoltage | +HV < 60 Vdc | Drive PWM outputs turn off until +HV is greater than 60 Vdc |
| Drive over temperature | IGBT > 85 °C ±3 °C | Drive PWM outputs turn off until IGBT temperature is below 85 °C |
| Short circuits | Motor: Output to output, output to ground, output to HV, internal PWM bridge faults Regen: Regen+ to ground, Regen- to HV | |
| I ² T Current limiting | Programmable: continuous current, peak current, peak time | |
| Motor over temperature | [IN11] input programmable to disable drive when motor sensor resistance increases | |
| Feedback loss | Programmable to detect loss of A OR B encoder channels, or loss of A OR B OR X channels | |
| Command Signal Loss | CANopen master stops cyclical updates, network cable is unplugged | |
| 24V Reversed Polarity | Programmable as a latching fault Reversing the +24V connections (J3-4 & J3-1) will not damage the drive | |

MECHANICAL & ENVIRONMENTAL

| | |
|---------------------|---|
| Size | 7.54 x 4.55 x 2.13 [191.4 x 115.6 x 54.1] |
| Weight | 2.2 lb [1.0 kg] |
| Ambient temperature | 0 to +45 °C operating, -40 to +85 °C storage |
| Altitude | ≤ 2000 m (6560 ft) |
| Humidity | 0% to 95%, non-condensing |
| Contaminants | Pollution degree 2 |
| Vibration | 2 g peak, 10~500 Hz (sine), IEC60068-2-6 |
| Shock | 10 g, 10 ms, half-sine pulse, IEC60068-2-27 |
| Cooling | Internal fan allows operation at rated continuous current to 45 C ambient |

AGENCY STANDARDS CONFORMANCE

Standards and Directives

Functional Safety

IEC 61508-1:2010, IEC 61508-2:2010, IEC 61508-3:2010, IEC 61508-4: 2010 (SIL 3)
 Directive 2006/42/EC (Machinery)
 ISO 13849-1/Cor. 1:2009 (Cat 3, PL d)
 IEC 61800-5-2:2007 (SIL3)

Reference: Xenus Plus Compact STO Manual

Product Safety

Directive 2006/95/EC (Low Voltage)
 IEC 61800-5-1:2007

EMC

Directive 2004/108/EC (EMC)
 IEC 61800-3:2004/A1:2011

Restriction of the Use of Certain Hazardous Substances (RoHS)

Directive 2011/65/EU (RoHS II)

Approvals

UL and cUL recognized component to:
 UL 61800-5-1, 1st Ed.

UL Functional Safety Certification to:

IEC 61508-1:2010, IEC 61508-2:2010, IEC 61508-3:2010, IEC 61508-4: 2010 (SIL 3)
 ISO 13849-1/Cor. 1:2009 (Cat 3, PL d)

GENERAL SPECIFICATIONS

FEEDBACK

Incremental:

| | |
|-----------------------------|---|
| Digital Incremental Encoder | Quadrature signals, (A, /A, B, /B, X, /X), differential (X, /X Index signals not required) 5 MHz maximum line frequency (20 M counts/sec), MAX3097 differential line receiver 121 Ω terminators between A & /A, B & /B inputs, 130 Ω between X & /X input |
| Analog Incremental Encoder | Sin/cos format (Sin+, Sin-, Cos+, Cos-), differential, 1 Vpeak-peak ±20%, ServoTube motor compatible BW > 300 kHz, 121 Ω terminating resistors between Sin+ & Sin-, Cos+ & Cos- inputs 12-bit resolution, BW > 300 kHz, with zero-crossing detection |

Absolute:

| | |
|--|---|
| SSI | Clock (X, /X), Data (S, /S) signals, 4-wire, Clock is output from XPC, Data is input from encoder 130 Ω terminator between X & /X outputs, 221 Ω between S & /S inputs 1 kΩ pull-ups to +5 Vdc on X & S, 1 kΩ pull-downs to Sgnd on /X & /S |
| EnDAT | Clock (X, /X), Data (S, /S), Sin/Cos (Sin+, Sin-, Cos+, Cos-) signals |
| Absolute A, Tamagawa Absolute A, Panasonic Absolute A Format, Sanyo Denki Absolute A | SD+, SD- (S, /S) signals, 2.5 or 4 MHz, 2-wire half-duplex communication Position feedback: 13-bit resolution per rev, 16 bit revolution counter (29 bit absolute position data) Status data for encoder operating conditions and errors |
| BiSS (B&C) | MA+, MA- (X, /X), SL+, SL- (S, /S) signals, 4-wire, Clock output from XPC, Data is input from encoder X & S channels for absolute encoders use ISL3178 bi-directional line driver/receivers |

HALLS

Digital:

U, V, W: Single-ended, 120° electrical phase difference between U-V-W signals,
Schmitt trigger, 1 μs RC filter, 24 Vdc compatible, 10 kΩ pull-up to +5 Vdc
Vt+ = 2.5~3.5 Vdc, VT- = 1.3~2.2 Vdc, VH = 0.7~1.5 Vdc

Analog:

U & V: Sin/cos format (Sin+, Sin-, Cos+, Cos-), differential, 1 Vpeak-peak ±20%, ServoTube motor compatible
BW > 300 kHz, 121 Ω terminating resistors between Sin+ & Sin-, Cos+ & Cos- inputs
12-bit resolution, BW > 300 kHz, with zero-crossing detection

MULTI-MODE ENCODER PORT

| | |
|--------------------|---|
| As Input | See Digital Incremental Encoder above for electrical data on A, B, & X channels, or Absolute encoders using X or S channels. No terminators on A & B channels, X & S channels as shown above |
| As Emulated Output | Quadrature A/B encoder emulation with programmable resolution to 4096 lines (65,536 counts) per rev from analog sin/cos encoders or absolute encoders. A/B outputs use ISL3178 line drivers. |
| As Buffered Output | A, /A, B, /B, outputs from ISL3178 differential line driver, X, /X, S, /S outputs from ISL3178 driver Digital A/B/X encoder signals from primary digital encoder are buffered by ISL3178 line drivers, 5 MHz max |

5V OUTPUTS

| | |
|---------|---|
| Number | 2: +5Vout1 on the feedback connector (J5), +5Vout2 on the control connector (J6) for the multi-mode encoder |
| Ratings | +5 Vdc @ 500 mA each output, 1000 mA total for both outputs, thermal and overload protected |

CANOPEN COMMUNICATIONS



Xenus uses the CAN physical layer signals CAN_H, CAN_L, and CAN_GND for connection, and CANopen protocol for communication. Before installing the drive in a CAN system, it must be assigned a CAN address. A maximum of 127 CAN nodes are allowed on a single CAN bus. The rotary switch on the front panel controls the four lower bits of the seven-bit CAN address. When the number of nodes on a bus is less than sixteen, the CAN address can be set using only the switch. Address 0 is reserved for the CAN bus master. For installations with sixteen or more CAN nodes on a network CME 2 can be used to configure Xenus to use the rotary switch, or combinations of digital inputs and programmed offset in flash memory to configure the drive with a higher CAN node address. For more information on CANopen communications, download the CANopen Manual from the Copley web-site: <http://www.copleycontrols.com/motion/downloads/pdf/CANopenProgrammersManual.pdf>

CANOPEN CONNECTORS

Dual RJ-45 connectors that accept standard Ethernet cables are provided for CAN bus connectivity. Pins are wired-through so that drives can be daisy-chained and controlled with a single connection to the user's CAN interface. A CAN terminator should be placed in the last drive in the chain. The XP2-NK connector kit provides a D-Sub adapter that plugs into a CAN controller and has an RJ-45 socket that accepts the Ethernet cable.

XP2-NK CAN CONNECTOR KIT

The kit contains the XP2-CV adapter that converts the CAN interface D-Sub 9M connector to an RJ-45 Ethernet cable socket, plus a 10 ft (3 m) cable and terminator. Both connector pin-outs conform to the CiA DR-303-1 specification.

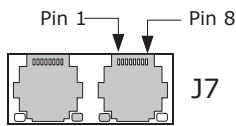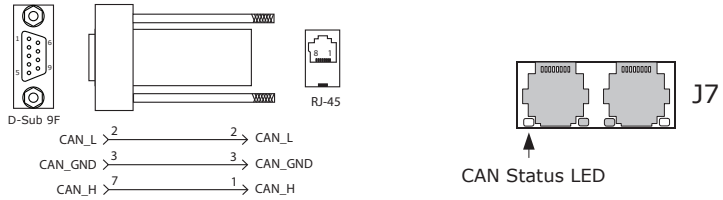

J7 CAN CONNECTIONS

NET (CAN STATUS) LED

A bi-color LED gives the state of the CAN connection in accordance with the CAN-CiA specification 303, part 3.

The green (RUN) LED shows the state of the CANopen state machine. The red (ERR) LED shows the occurrence of errors (sync, guard, or heartbeat) and of the CAN bus physical layer.

During a reset condition, the green LED will be off. In operation, the red & green colors will alternate with the number of blinks or on/off condition shown in the table to the right.


Note: Red & green led on-times do not overlap. LED color may be red, green, off, or flashing of either color.

CAN STATUS LED

DRIVE STATE

- Pre-operational
- Operational
- Stopped
- Warning Limit Reached
- Error Control Event
- Sync Error
- Bus-off


LED ON-OFF CONDITION

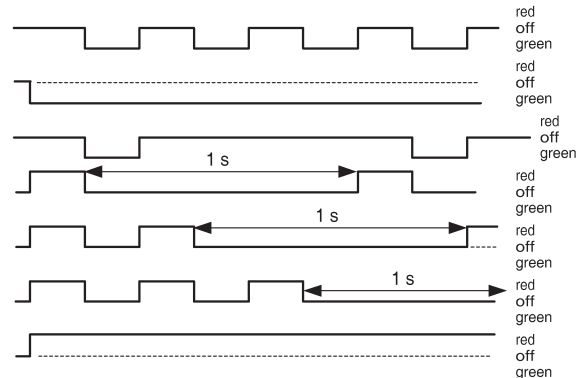

Note: Red & green led on-times do not overlap. LED color may be red, green, off, or flashing of either color.

CAN NETWORK NODE-ID (ADDRESS)

In an CANopen network, nodes are assigned addresses 1~127. Address 0 is reserved for the CAN bus master. In the XPC, the node address is provided by two 16-position rotary switches with hexadecimal encoding. These can set the address of the drive from 0x01~0x7F (1~127 decimal). The chart shows the decimal values of the hex settings of each switch.

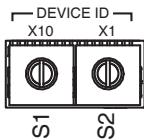

Node-ID (Address) Switches

To find the Node-ID given the switch settings:

Node-ID = (S1 * 16) + S2

Example: S1 = 5, S2 = B

S1 value = (5*16) = 80, S2 value = Hex(B) = 11, Node-ID = 80 + 11 = 91

To find the switch settings for a given address:

S1 = The integer part of (Node-ID / 16)


S2 = Hex (Node-ID - (S1 * 16))

Example: Node-ID = 91

S1 = 91/16 = 5.69, integer part = 5, (5*16) = 80

S2 = Hex (91 - 80) = 11 = 0xB

| | S1 | S2 |
|-----|-----------------------|----|
| HEX | DEC | |
| 0 | 0 | 0 |
| 1 | 16 | 1 |
| 2 | 32 | 2 |
| 3 | 48 | 3 |
| 4 | 64 | 4 |
| 5 | 80 | 5 |
| 6 | 96 | 6 |
| 7 | 112 | 7 |
| 8 | Not Used for CAN Addr | 8 |
| 9 | | 9 |
| A | | 10 |
| B | | 11 |
| C | | 12 |
| D | | 13 |
| E | | 14 |
| F | | 15 |

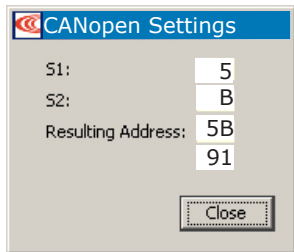

CME2 -> Amplifier -> Network Configuration


COMMUNICATIONS: RS-232 SERIAL

RS-232 COMMUNICATIONS

XPC is configured via a three-wire, full-duplex DTE RS-232 port that operates from 9600 to 115,200 Baud, 8 bits, no parity, and one stop bit. Signal format is full-duplex, 3-wire, DTE using RxD, TxD, and Gnd. Connections to the XPC RS-232 port are through J8, an RJ-11 connector. The XPC Serial Cable Kit (SER-CK) contains a modular cable, and an adapter that connects to a 9-pin, Sub-D serial port connector (COM1, COM2, etc.) on PC's and compatibles.


SER-CK SERIAL CABLE KIT

The SER-CK provides connectivity between a D-Sub 9 male connector and the RJ-11 connector on the XPC. It includes an adapter that plugs into the COM1 (or other) port of a PC and uses common modular cable to connect to the XPC. The connections are shown in the diagram below.

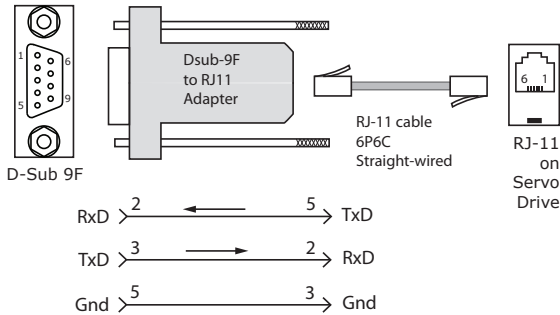

J8: RS-232 PORT

RJ-11 receptacle, 6 position, 4 contact

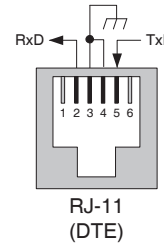

| PIN | SIGNAL |
|-----|--------|
| 2 | RxD |
| 3,4 | Gnd |
| 5 | TxD |



Don't forget to order a Serial Cable Kit SER-CK when placing your order for an XPC!

ASCII COMMUNICATION PROTOCOL

ASCII COMMUNICATIONS


The Copley ASCII Interface is a set of ASCII format commands that can be used to operate and monitor Copley Controls Accelnet, Stepnet, and Xenus series amplifiers over an RS-232 serial connection. For instance, after basic amplifier configuration values have been programmed using CME 2, a control program can use the ASCII Interface to:

- Enable the amplifier in Programmed Position mode.
- Home the axis.
- Issue a series of move commands while monitoring position, velocity, and other run-time variables.

Additional information can be found in the ASCII Programmers Guide on the Copley website: http://www.copleycontrols.com/Motion/pdf/ASCII_ProgrammersGuide.pdf

RS-232 MULTI-DROP

The RS-232 specification makes no allowance for more than two devices on a serial link. But, multiple XPC drives can communicate over a single RS-232 port by daisy-chaining a master drive to other drives using CAN cables. In the CAN protocol, address 0 is reserved for the CAN master and thereafter all other nodes on a CAN network must have unique, non-zero addresses. When the XPC CAN address is set to 0, it acts as a CAN master, converting the RS-232 data into CAN messages and passing it along to the other drives which act as CAN nodes.

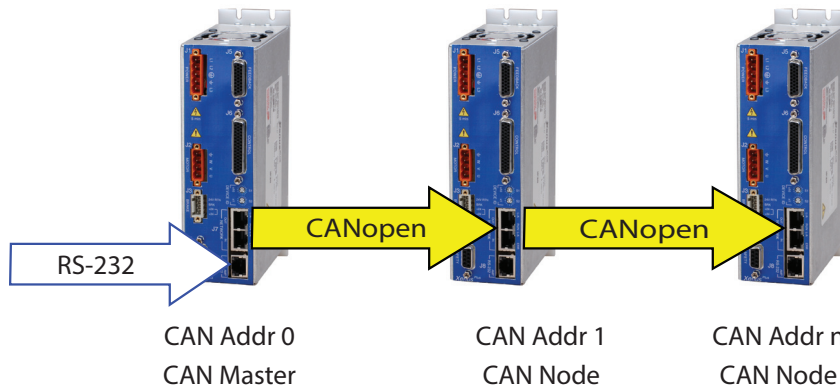


For Serial-multi-drop you'll need an Serial Cable Kit SER-CK plus CANopen network cables to connect the drives as shown. The XP2-NC-01 and XP2-NC-10 are 1 ft (0.3m) and 10 ft (3m) cables that will do the job.

SAFE TORQUE OFF (STO)

DESCRIPTION

The XPC provides the Safe Torque Off (STO) function as defined in IEC 61800-5-2. Three opto-couplers are provided which, when de-energized, prevent the upper and lower devices in the PWM outputs from being operated by the digital control core. This provides a positive OFF capability that cannot be overridden by the control firmware, or associated hardware components. When the opto-couplers are activated (current is flowing in the input diodes), the control core will be able to control the on/off state of the PWM outputs.

INSTALLATION

| | |
|--|--|
|  <p>DANGER</p> | <p>Refer to the Xenus Plus Compact STO Manual</p> |
| | <p>The information provided in the Xenus Plus Dual-Axis STO User Manual must be considered for any application using the XPC drive STO feature.</p> <p>Failure to heed this warning can cause equipment damage, injury, or death.</p> |

STO BYPASS (MUTING)

In order for the PWM outputs of the drive to be activated, current must be flowing through all of the opto-couplers that are connected to the STO-1 and STO-2 terminals of J4, and the drive must be in an ENABLED state. When the opto-couplers are OFF, the drive is in a Safe Torque Off (STO) state and the PWM outputs cannot be activated by the control core to drive a motor. This diagram shows connections that will energize all of the opto-couplers from an internal current-source. When this is done the STO feature is overridden and control of the output PWM stage is under control of the digital control core.

If not using the STO feature, these connections must be made in order for the drive to be enabled.


STO BYPASS CONNECTIONS

Bypass Plug Connections
 Jumper pins:
 2-4, 3-5, 6-8, 7-9 *




Current must flow through all of the opto-couplers before the drive can be enabled

* STO bypass connections on the XPC and Xenus XEL/XPL models are different. If both drives are installed in the same cabinet, the diode should be wired as shown to prevent damage that could occur if the STO bypass connectors are installed on the wrong drive. The diode is not required for STO bypass on the XPC and can be replaced by a wire between pins 7 and 9.

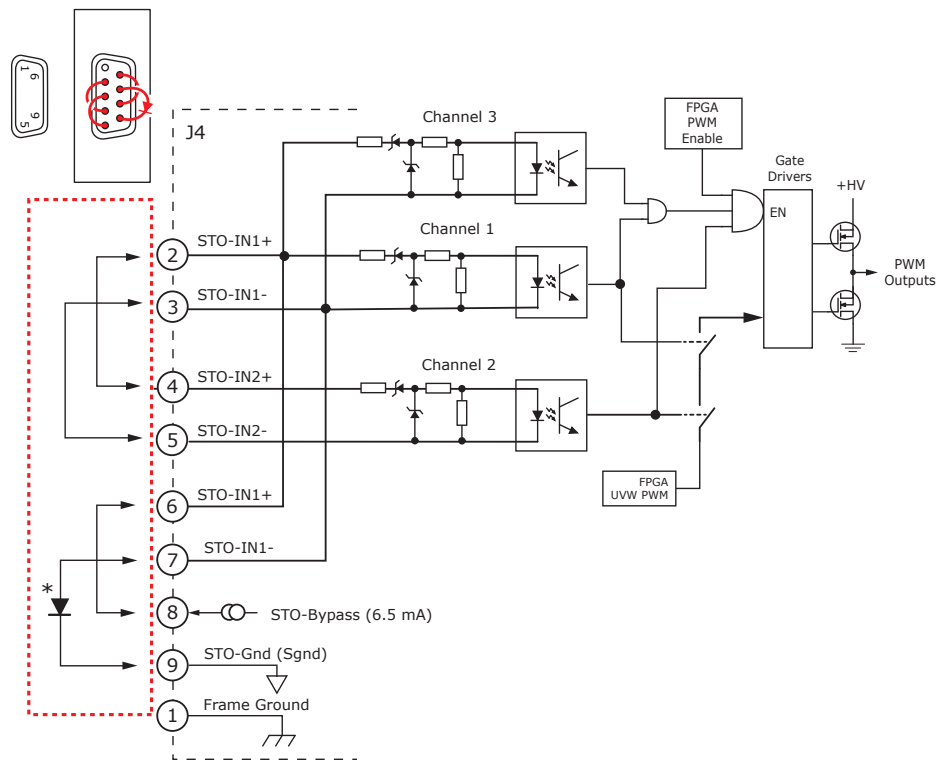

STO CONNECTOR

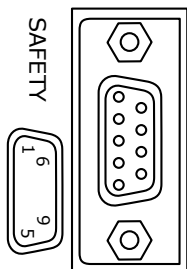

J4 SIGNALS

| PIN | SIGNAL | PIN | SIGNAL |
|-----|-----------|-----|----------|
| 1 | Frame Gnd | 6 | STO-1(+) |
| 2 | STO-1(+) | 7 | STO-1(-) |
| 3 | STO-1(-) | 8 | STO-PWR |
| 4 | STO-2(+) | 9 | STO-Gnd |
| 5 | STO-2(-) | | |


DIGITAL COMMAND INPUTS: POSITION

POSITION COMMAND INPUTS


Digital position commands must be sourced from devices with active pull-up and pull-down to take advantage of the high-speed inputs.

For differential commands, the A & B channels of the multi-mode encoder ports may be used.

SINGLE-ENDED PULSE & DIRECTION




DIFFERENTIAL PULSE & DIRECTION

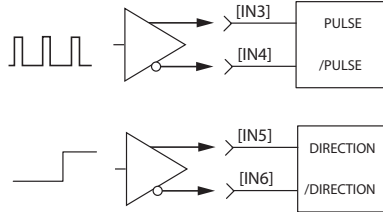


SINGLE-ENDED: IN5, 6

| Signal | J6 Pins |
|----------------------|-------------------|
| [IN5] Pls, CU, Enc A | 11 |
| [IN6] Dir, CD, Enc B | 12 |
| Signal Ground | 6,16,22,31, 37,44 |
| Frame Ground | 1 |

SINGLE-ENDED CU/CD




DIFFERENTIAL CU/CD

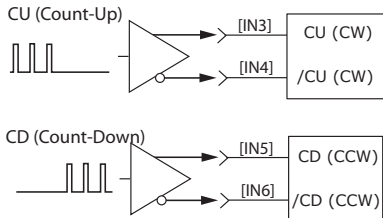


DIFFERENTIAL: IN3,4,5,6

| Signal | J6 Pins |
|-------------------------|-------------------|
| [IN3] Pls, CU, Enc A | 9 |
| [IN4] /Pls, /CU, Enc /A | 10 |
| [IN5] Dir, CD, Enc B | 11 |
| [IN6] /Dir, /CD, Enc /B | 12 |
| Signal Ground | 6,16,22,31, 37,44 |
| Frame Ground | 1 |

QUAD A/B ENCODER SINGLE-ENDED

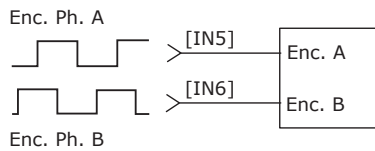

QUAD A/B ENCODER DIFFERENTIAL

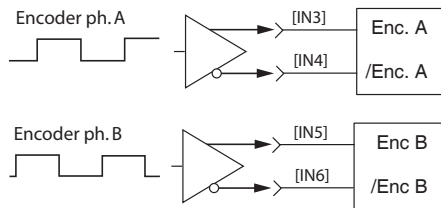


DIGITAL COMMAND INPUTS: VELOCITY, TORQUE


Single-ended digital torque or velocity commands must be sourced from devices with active pull-up and pull-down to take advantage of the high-speed inputs.

For differential commands, the A & B channels of the multi-mode encoder ports may be used.

SINGLE-ENDED PWM & DIRECTION




DIFFERENTIAL PWM & DIRECTION

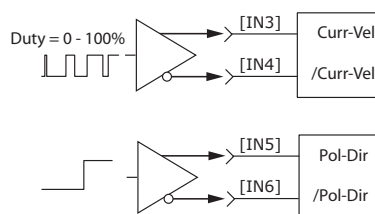


SINGLE-ENDED: IN5,6

| Signal | J6 Pins |
|-----------------|-------------------|
| [IN5] Curr-Vel± | 11 |
| [IN6] Pol-Dir | 12 |
| Sgnd | 6,16,22,31, 37,44 |
| Frame Ground | 1 |

SINGLE-ENDED 50% PWM

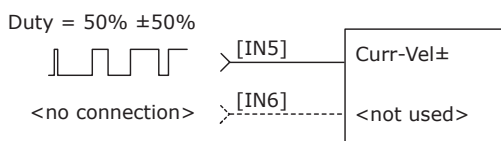

DIFFERENTIAL 50% PWM

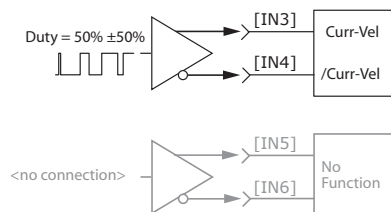

DIFFERENTIAL: IN3,4,5,6


| Signal | J6 Pins |
|------------------|-------------------|
| [IN3] Curr-Vel± | 9 |
| [IN4] /Curr-Vel± | 10 |
| [IN5] Pol-Dir | 11 |
| [IN6] /Pol-Dir | 12 |
| Signal Ground | 6,16,22,31, 37,44 |
| Frame Ground | 1 |

MULTI-MODE ENCODER PORT AS AN INPUT

INPUT TYPES


POSITION COMMAND INPUTS: DIFFERENTIAL

- Pulse & Direction
- CW & CCW (Clockwise & Counter-Clockwise)
- Encoder Quad A & B
- Camming Encoder A & B input

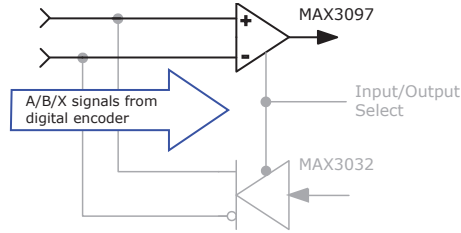


CURRENT or VELOCITY COMMAND INPUTS: DIFFERENTIAL

- Current or Velocity & Direction
- Current or Velocity (+) & Current or Velocity (-)

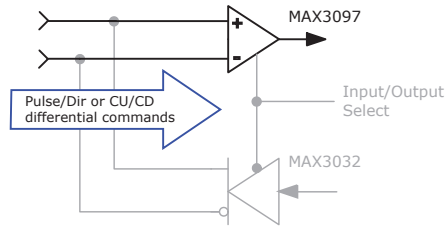



SECONDARY FEEDBACK: INCREMENTAL

- Quad A/B/X incremental encoder

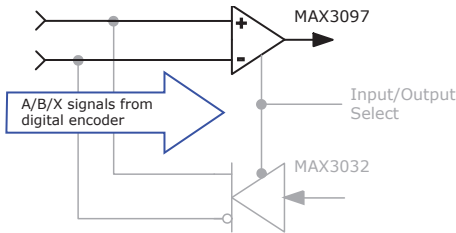


SECONDARY FEEDBACK: ABSOLUTE

- S channel: Absolute A encoders (2-wire)
The S channel first sends a Clock signal and then receives Data from the encoder in half-duplex mode.
- S & X channels: SSI, BiSS, EnDat encoders (4-wire)
The X channel sends the Clock signal to the encoder, which initiates data transmission from the encoder on the S-channel in full-duplex mode

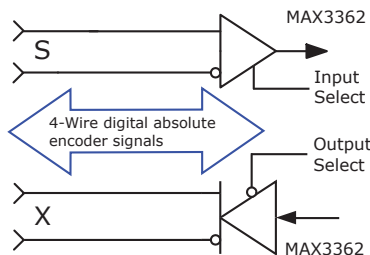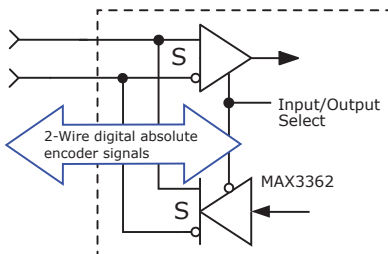

SIGNALS & PINS

| Signal | J6 |
|---------------------------------|-----------------------|
| Pulse, CW, Encoder A | 36 |
| /Pulse, /CW, Encoder /A | 21 |
| Direction, CCW, Encoder B | 35 |
| /Direction, /CCW, Encoder /B | 20 |
| Quad Enc X, Absolute Clock | 34 |
| Quad Enc /X, /Absolute Clock | 19 |
| Enc S, Absolute (Clock) Data | 33 |
| Enc /S, / Absolute (Clock) Data | 18 |
| Signal Ground | 6, 16, 22, 31, 37, 44 |
| Frame Ground | 1 |

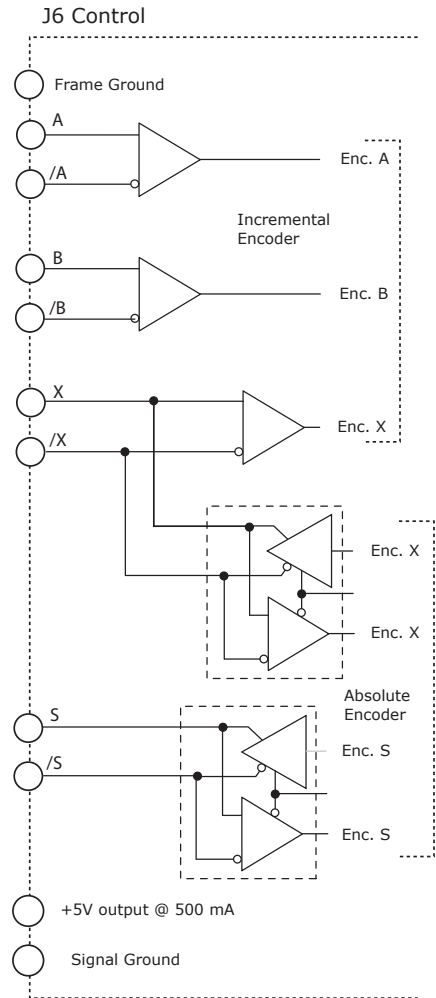

MULTI-MODE PORT AS AN OUTPUT

OUTPUT TYPES

BUFFERED FEEDBACK OUTPUTS: DIFFERENTIAL

- Encoder Quad A, B, X channels
- Direct hardware connection between quad A/B/X encoder feedback and differential line drivers for A/B/X outputs




EMULATED FEEDBACK OUTPUTS: DIFFERENTIAL

Firmware produces emulated quad A/B signals from feedback data from the following devices:

- Absolute encoders
- Analog Sin/Cos incremental encoders

SIGNALS & PINS

| | |
|---------------|-----------------------|
| Signal | J6 |
| Encoder A | 36 |
| Encoder /A | 21 |
| Encoder B | 35 |
| Encoder /B | 20 |
| Encoder X | 34 |
| Encoder /X | 19 |
| Encoder S | 33 |
| Encoder /S | 18 |
| Signal Ground | 6, 16, 22, 31, 37, 44 |
| Frame Ground | 1 |

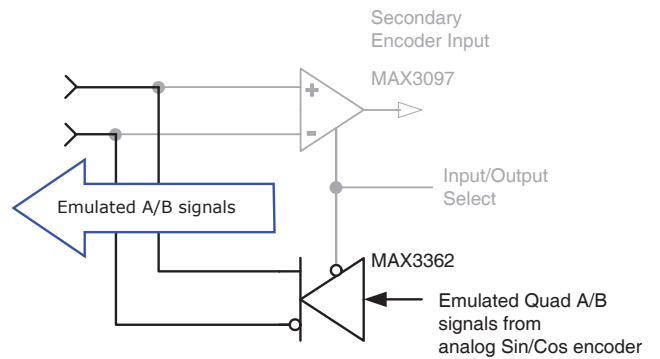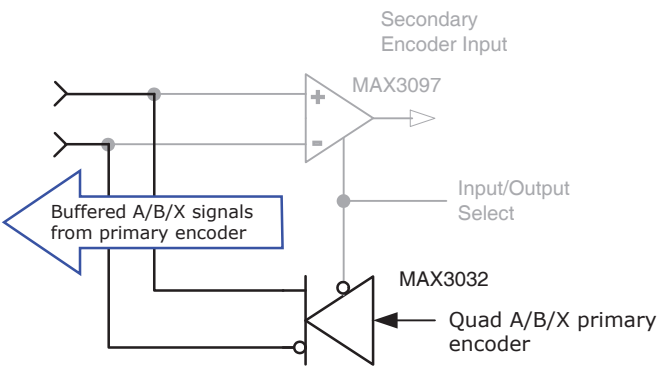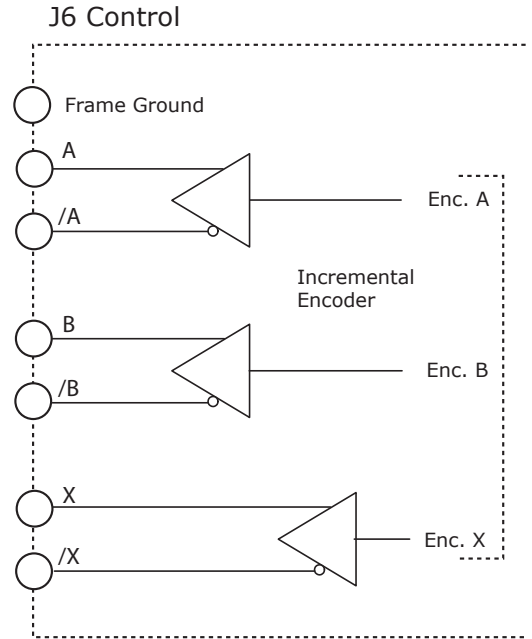

CME2 DEFAULTS

These tables show the CME2 default settings. They are user-programmable and the settings can be saved to non-volatile flash memory.

Input/Output
 Digital Inputs | Digital Outputs

| Name | Configuration | PU/PD |
|------|-------------------------|---------|
| IN1 | Enable-LO, Clear Faults | +5V/Gnd |
| IN2 | Not Configured | |
| IN3 | | |
| IN4 | | |
| IN5 | | |
| IN6 | | |
| IN7 | Opto Not Configured | |
| IN8 | | |
| IN9 | | |
| IN10 | | |
| IN11 | Motemp | +5V PU |

Input/Output
 Digital Inputs | Digital Outputs

| Name | Notes |
|------|-----------------------------|
| OUT1 | Isolated Not Configured |
| OUT2 | |
| OUT3 | |
| OUT4 | HS Output Not Configured |
| OUT5 | Brake Active-HI |

Filter Configuration
 Filter Settings | Analog | V Loop | I Loop | Input Shaping

| Name | Notes |
|--------------------------|---------------------------------------|
| Analog: Reference Filter | Disabled |
| Vloop: Input Filter | Disabled |
| Vloop: Output Filter 1 | Low Pass, Butterworth, 2-pole, 200 Hz |
| Vloop: Output Filter 2 | Disabled |
| Vloop: Output Filter 3 | Disabled |
| Iloop: Input Filter 1 | Disabled |
| Iloop: Input Filter 2 | Disabled |
| Input Shaping | Disabled |

Fault Configuration
 Latch Fault

| Active | Notes |
|--------|---------------------------|
| ✓ | Short Circuit |
| ✓ | Amp Over Temperature |
| ✓ | Motor Over Temp |
| | Over Voltage |
| | Under Voltage |
| ✓ | Feedback Error |
| | Motor Phasing Error |
| ✓ | Following Error |
| | Command Input Fault |
| | Motor Wiring Disconnected |
| | STO Active |

Home

| Option | Notes |
|--------|------------------------------|
| Method | Set Current Position as Home |

OPTIONAL FAULTS

| | |
|--|------------------------|
| | Over Current (Latched) |
|--|------------------------|

HIGH SPEED INPUTS: IN1, IN2

- Digital, non-isolated, high-speed
- Programmable pull-up/pull-down
- 24V Compatible
- Programmable functions


SPECIFICATIONS

| Input | Data | Notes |
|-----------------|-----------------|-------------------|
| Input Voltages | HI | VT+ = 2.5~3.5 Vdc |
| | LO | VT- = 1.3~2.2 Vdc |
| | VH ¹ | VH = ±0.7~1.5 Vdc |
| | Max | +30 Vdc |
| | Min | 0 Vdc |
| Pull-up/down | R1 | 15 kΩ |
| Low pass filter | R2 | 15 kΩ |
| | C1 | 100 pF |
| Input Current | 24V | 1.3 mAdc |
| | 0V | -0.33 mAdc |
| Time constant | RC ² | 1.5 μs |

CONNECTIONS

| Input | Pin |
|-------|--------------------------|
| IN1 | J6-7 |
| IN2 | J6-8 |
| Sgnd | J6-6, 16, 22, 31, 37, 44 |

FEEDBACK CONNECTOR

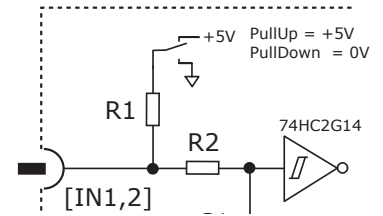

- Notes:
- 1) VH is hysteresis voltage (VT+) - (VT-)
 - 2) The R2*C2 time constant applies when input is driven by active HI/LO devices


SINGLE-ENDED/DIFFERENTIAL INPUTS: IN3, IN4, IN5, IN6

- Digital, non-isolated, high-speed
- Programmable pull-up/pull-down
- 12V Compatible
- Single-ended or Differential
- Programmable functions


SPECIFICATIONS

| Input | Data | Notes |
|--|-----------------|-------------------|
| Input Voltages Single-ended | HI | Vin ≥ 2.7 Vdc |
| | LO | Vin ≤ 2.3 Vdc |
| | VH ¹ | 45 mVdc typ |
| Input Voltages Differential ³ | HI | Vdiff ≥ +200 mVdc |
| | LO | Vdiff ≤ -200 mVdc |
| | VH | ±45 mVdc typ |
| Common mode | Vcm | 0 to +12 Vdc |
| Pull-up/down | R1 | 10 kΩ |
| Low pass filter | R2 | 1 kΩ |
| | C1 | 100 pF |
| Time constant | RC ² | 100 ns |

SINGLE-ENDED

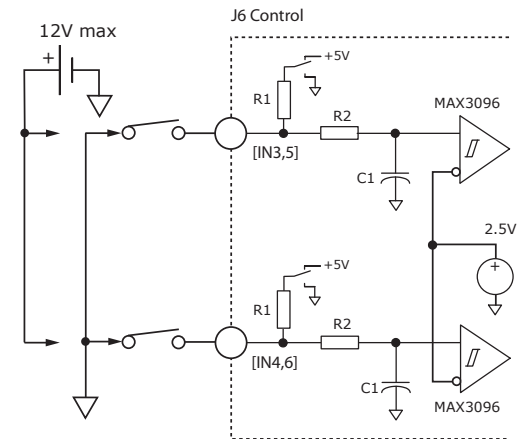

DIFFERENTIAL

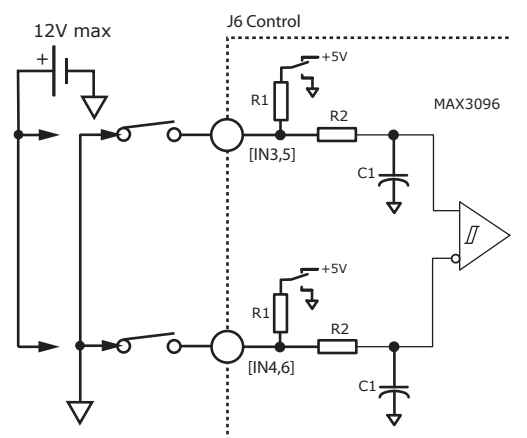

CONNECTIONS

| S.E. | DIFF | Pin |
|------|------|--------------------------|
| IN3 | IN3+ | J6-9 |
| IN4 | IN4- | J6-10 |
| IN5 | IN5+ | J6-11 |
| IN6 | IN6- | J6-12 |
| Sgnd | | J6-6, 16, 22, 31, 37, 44 |

- Notes:
- 1) VH is hysteresis voltage IN2 - IN3 or IN12 - IN13
 - 2) The R2*C2 time constant applies when input is driven by active HI/LO devices
 - 3) Vdiff = AINn(+) - AINn(-)
n = 1 for Axis A, 2 for Axis B


OPTO-ISOLATED INPUTS: IN7, IN8, IN9, IN10

- Digital, opto-isolated
- A group of four, with a common terminal
- Works with current sourcing or sinking drivers
- 24V Compatible
- Programmable functions

| SPECIFICATIONS | | |
|----------------|------------------|--------------------------------------|
| Input | Data | Notes |
| Input Voltages | HI | $V_{in} \geq \pm 10.0 \text{ Vdc} *$ |
| | LO | $V_{in} \leq \pm 6 \text{ Vdc} *$ |
| | Max | $\pm 30 \text{ Vdc} *$ |
| Input Current | $\pm 24\text{V}$ | $\pm 3.6 \text{ mAdc}$ |
| | 0V | 0 mAdc |

* Vdc Referenced to ICOM terminals.

| CONNECTIONS | |
|-------------|--------|
| Signal | J6 Pin |
| IN7 | 13 |
| IN8 | 14 |
| IN9 | 15 |
| IN10 | 30 |
| ICOM | 28 |

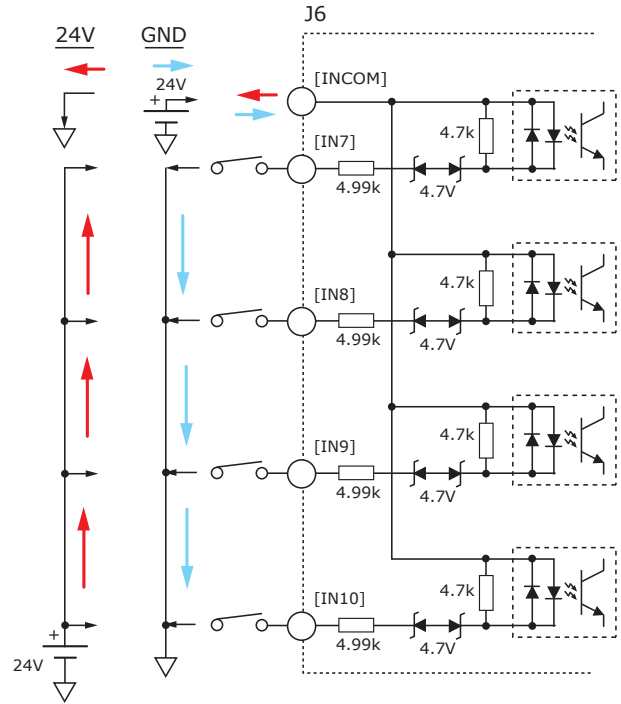

MOTOR OVERTEMP INPUT: IN11

- Digital, non-isolated
- Motor overtemp input
- 24V Compatible
- Programmable functions

MOTOR OVER TEMP INPUT

The 4.99k pull-up resistor works with PTC (positive temperature coefficient) thermistors that conform to BS 4999:Part 111:1987, or switches that open/close indicating a motor over-temperature condition. The active level is programmable.


SPECIFICATIONS

| Input | Data | Notes |
|-----------------|------|-------------------------------|
| Input Voltages | HI | $V_{in} \geq 3.5 \text{ Vdc}$ |
| | LO | $V_{in} \leq 0.7 \text{ Vdc}$ |
| | Max | +24 Vdc |
| | Min | 0 Vdc |
| Pull-up | R1 | 4.99 kΩ |
| Input Current | 24V | 5.7 mAdc |
| | 0V | -1.0 mAdc |
| Low pass filter | R2 | 10 kΩ |
| | C1 | 33 nF |
| Time constant | Te | 330 μs * |

* RC time constant applies when input is driven by active high/low device

CONNECTIONS

| Input | Pin |
|-------|------------------|
| IN11 | J5-7 |
| Sgnd | J5-5, 16, 25, 26 |

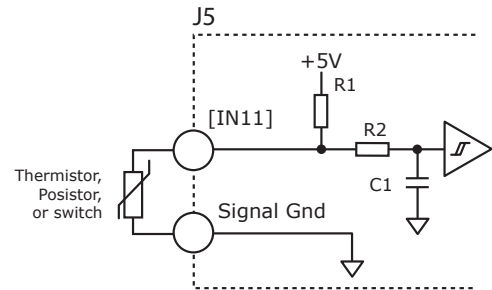

BS 4999:Part 111:1987

| Property | ohms |
|---|--------|
| Resistance in the temperature range 20°C to +70°C | 60~750 |
| Resistance at 85°C | ≤1650 |
| Resistance at 95°C | ≥3990 |
| Resistance at 105°C | ≥12000 |

ANALOG INPUT: AIN1

- ±10 Vdc, differential
- 12-bit resolution
- Programmable functions


As a reference input it takes position/velocity/torque commands from a controller. If not used as a command input, it can be used as general-purpose analog input.

SPECIFICATIONS

| Spec | Data | Notes |
|------------------|------|---------|
| Input Voltage | Vref | ±10 Vdc |
| Input Resistance | Rin | 5.05 kΩ |

CONNECTIONS

| Signal | Pins |
|--------|--------------------------|
| AIN(+) | J6-3 |
| AIN(-) | J6-2 |
| Sgnd | J6-6, 16, 22, 31, 37, 44 |

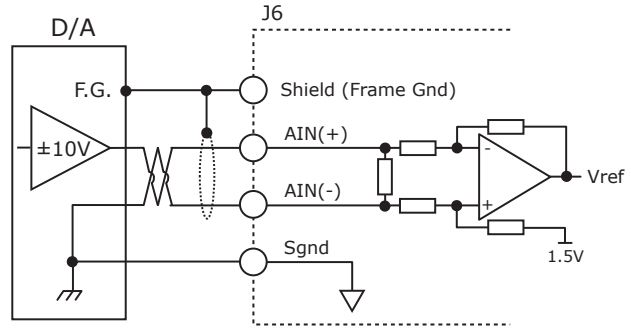

OPTO-ISOLATED OUTPUTS: OUT1, OUT2, OUT3


- Digital, opto-isolated
- MOSFET output SSR, 2-terminal
- Flyback diode for inductive loads
- 24V Compatible
- Programmable functions

SPECIFICATIONS

| Output | Data | Notes |
|-------------------------------|------|------------------|
| ON Voltage OUT(+) - OUT(-) | Vdc | 0.85V @ 300 mAdc |
| Output Current | Iout | 300 mAdc max |

CONNECTIONS

| Signal | (+) | (-) |
|--------|-------|-------|
| OUT1 | J6-42 | J6-27 |
| OUT2 | J6-41 | J6-26 |
| OUT3 | J6-40 | J6-25 |

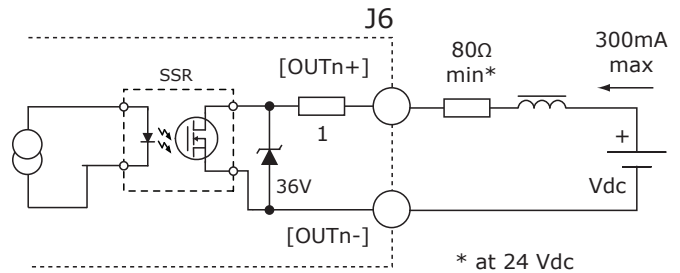

HI/LO DEFINITIONS: OUTPUTS


| Input | State | Condition |
|--------|-------|-------------------------------------|
| OUT1~3 | HI | Output SSR is ON, current flows |
| | LO | Output SSR is OFF, no current flows |

HIGH-SPEED OUTPUT: OUT4

- CMOS buffer
- 74AHCT1G125
- Programmable functions

SPECIFICATIONS

| Output HI | Data | Notes |
|-----------|------|-----------|
| Vout HI | Voh | 4.4 Vdc |
| Iout HI | Ioh | -8.0 mAdc |
| Vout LO | Vol | 0.40 Vdc |
| Iout LO | Iol | 8.0 mAdc |

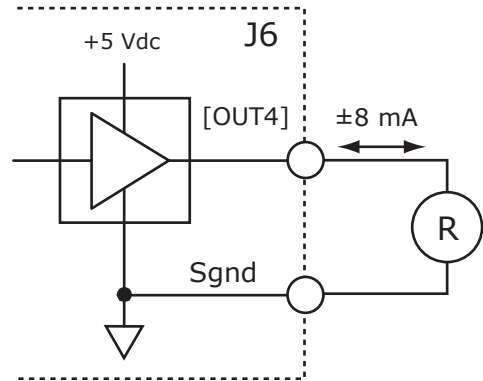

OPTO-ISOLATED MOTOR BRAKE OUTPUT: OUT5


- Brake output
- Opto-isolated
- Flyback diode for inductive load
- 24V Compatible
- Connection for external 24V power supply
- Programmable functions

SPECIFICATIONS

| Output | Data | Notes |
|----------------|------|---------|
| Voltage Range | Max | +30 Vdc |
| Output Current | Ids | 1.0 Adc |

HI/LO DEFINITIONS: OUTPUTS

| Input | State | Condition |
|--------------|-------|--|
| BRAKE [OUT5] | HI | Output transistor is OFF Brake is un-powered and locks motor Motor cannot move Brake state is Active |
| | LO | Output transistor is ON Brake is powered, releasing motor Motor is free to move Brake state is NOT-Active |

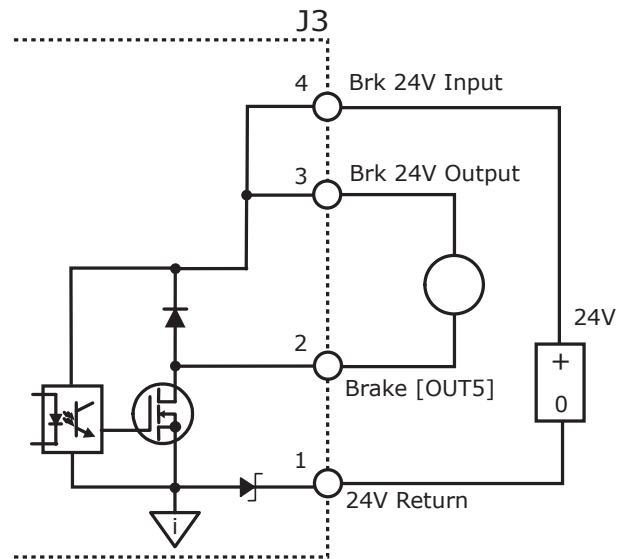

The brake circuits are optically isolated from all drive circuits and frame ground.

CME2 Default Setting for Brake Output [OUT5] is "Brake - Active HI"
 Active = Brake is holding motor shaft (i.e. the *Brake is Active*)
 Motor cannot move
 No current flows in coil of brake
 CME2 I/O Line States shows Output 4 as HI
 BRK Output voltage is HI (24V), MOSFET is OFF
 Servo drive output current is zero
 Servo drive is disabled, PWM outputs are off
 Inactive = Brake is not holding motor shaft (i.e. the *Brake is Inactive*)
 Motor can move
 Current flows in coil of brake
 CME2 I/O Line States shows Output 5 as LO
 BRK output voltage is LO (~0V), MOSFET is ON
 Servo drive is enabled, PWM outputs are on
 Servo drive output current is flowing

J3 CONNECTIONS

| Pin | Signal |
|-----|----------------|
| 4 | Brk 24V Input |
| 3 | Brk 24V Output |
| 2 | Brake [OUT5] |
| 1 | 24V Return |

FEEDBACK CONNECTIONS

QUAD A/B ENCODER WITH FAULT PROTECTION

Encoders with differential line-driver outputs are required (single-ended encoders are not supported) and provide incremental position feedback via the A/B signals and the optional index signal (X) gives a once per revolution position mark. The MAX3097 receiver has differential inputs with fault protections for the following conditions:

Short-circuits line-line:

This produces a near-zero voltage between A & /A which is below the differential fault threshold.

Open-circuit condition:

The 121Ω terminator resistor will pull the inputs together if either side (or both) is open. This will produce the same fault condition as a short-circuit across the inputs.

Low differential voltage detection:

This is possible with very long cable runs and a fault will occur if the differential input voltage is < 200mV.


±15kV ESD protection:

The 3097E has protection against high-voltage discharges using the Human Body Model.

Extended common-mode range:

A fault occurs if the input common-mode voltage is outside of the range of -10V to +13.2V

QUAD ENCODER WITH INDEX

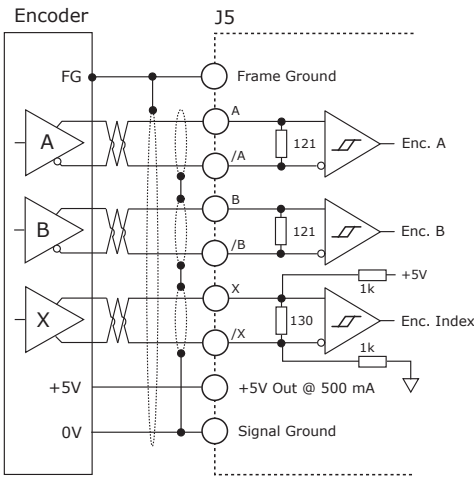


A/B/X SIGNALS

| Signal | J5 Pins |
|--------|---------------|
| Enc A | 13 |
| Enc /A | 12 |
| Enc B | 11 |
| Enc /B | 10 |
| Enc X | 9 |
| Enc /X | 8 |
| +5V | 6, 17 |
| Sgnd | 5, 16, 25, 26 |
| F.G. | 1 |


Sgnd = Signal Ground
F.G. = Frame Gnd

QUAD ENCODER WITH NO INDEX

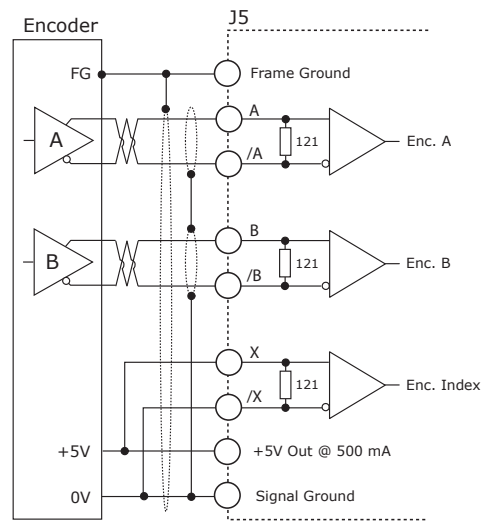

ANALOG SIN/COS INCREMENTAL ENCODER

The sin/cos inputs are analog differential with 121 Ω terminating resistors and accept 1 Vp-p signals in the format used by incremental encoders with analog outputs, or with ServoTube motors. The index input is digital, differential.

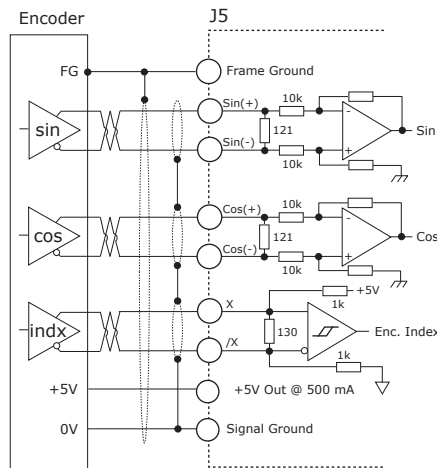

SIN/COS SIGNALS


| Signal | J5 Pins |
|--------|---------------|
| Sin(+) | 19 |
| Sin(-) | 18 |
| Cos(+) | 21 |
| Cos(-) | 20 |
| X | 9 |
| /X | 8 |
| +5V | 6, 17 |
| Sgnd | 5, 16, 25, 26 |
| F.G. | 1 |

Sgnd = Signal Ground
F.G. = Frame Gnd

FEEDBACK CONNECTIONS

SSI ABSOLUTE ENCODER

The SSI (Synchronous Serial Interface) is an interface used to connect an absolute position encoder to a motion controller or control system. The XPC drive provides a train of clock signals in differential format to the encoder which initiates the transmission of the position data on the subsequent clock pulses. The polling of the encoder data occurs at the current loop frequency (16 kHz). The number of encoder data bits and counts per motor revolution are programmable. The hardware bus consists of two signals: SCLK and SDATA. Data is sent in 8 bit bytes, LSB first. The SCLK signal is only active during transfers. Data is clocked out on the falling edge and clock in on the rising edge of the Master.

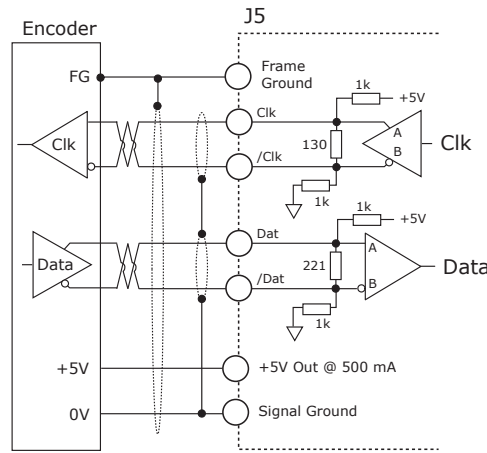

SSI, BiSS SIGNALS


| SSI | BiSS | J5 Pins |
|---------------|------|---------------|
| Clk | MA+ | 9 |
| /Clk | MA- | 8 |
| Data | SL+ | 15 |
| /Data | SL- | 14 |
| +5V | | 6, 17 |
| Signal Ground | | 5, 16, 25, 26 |
| Frame Gnd | | 1 |

Note: Single (outer) shields should be connected at both ends (motor and drive frame grounds). Inner shields should only be connected to Signal Ground on the drive.

BiSS ABSOLUTE ENCODER


BiSS is an - Open Source - digital interface for sensors and actuators. BiSS refers to principles of well known industrial standards for Serial Synchronous Interfaces like SSI, AS-Interface® and Interbus® with additional options.

- Serial Synchronous Data Communication
- Cyclic at high speed
- 2 unidirectional lines Clock and Data
- Line delay compensation for high speed data transfer
- Request for data generation at slaves
- Safety capable: CRC, Errors, Warnings
- Bus capability incl. actuators
- Bidirectional
- BiSS B-protocol: Mode choice at each cycle start
- BiSS C-protocol: Continuous mode

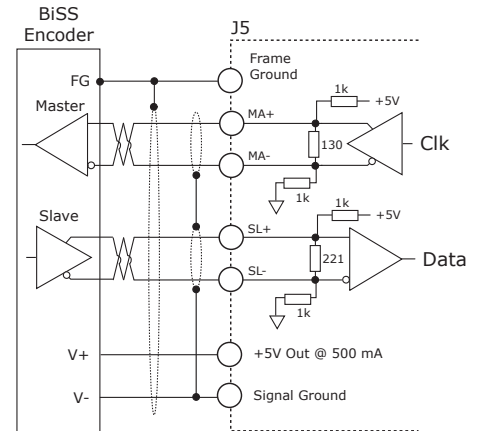

ENDAT ABSOLUTE ENCODER

The EnDat interface is a Heidenhain interface that is similar to SSI in the use of clock and data signals, but which also supports analog sin/cos channels from the same encoder. The number of position data bits is programmable as is the use of sin/cos channels. Use of sin/cos incremental signals is optional in the EnDat specification.

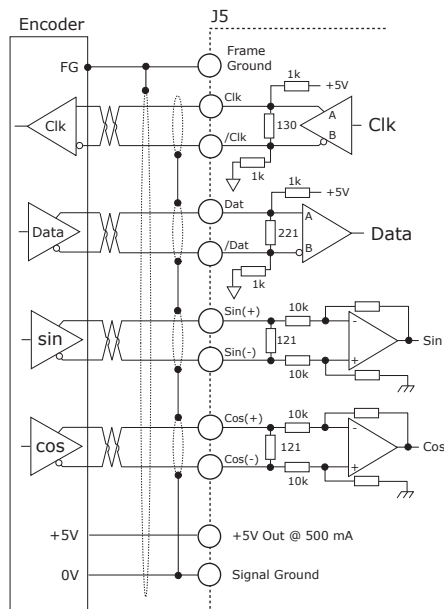


ENDAT SIGNALS

| Signal | J5 Pins |
|--------|---------------|
| Clk | 9 |
| /Clk | 8 |
| Data | 15 |
| /Data | 14 |
| Sin(+) | 19 |
| Sin(-) | 18 |
| Cos(+) | 21 |
| Cos(-) | 20 |
| +5V | 6, 17 |
| Sgnd | 5, 16, 25, 26 |
| F.G. | 1 |

Sgnd = Signal Ground
F.G. = Frame Gnd

ABSOLUTE-A ENCODER

The Absolute A interface is a serial, half-duplex type that is electrically the same as RS-485. Note the battery which must be connected. Without it, the encoder will produce a fault condition.

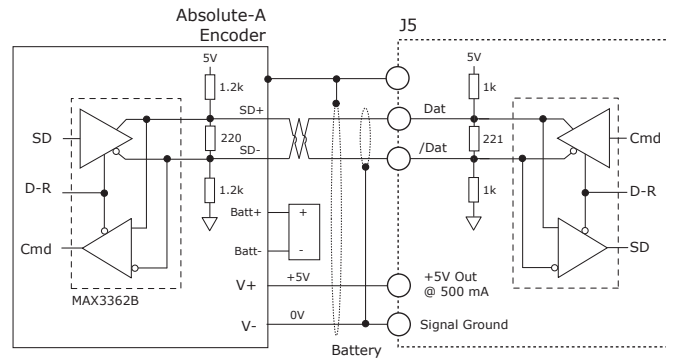

- Absolute A
- Tamagawa Absolute A
- Panasonic Absolute A Format
- Sanyo Denki Absolute A

ABSOLUTE-A SIGNALS

| Signal | J5 Pins |
|--------|---------------|
| Data | 15 |
| /Data | 14 |
| +5V | 6, 17 |
| Sgnd | 5, 16, 25, 26 |
| F.G. | 1 |

Sgnd = Signal Ground
F.G. = Frame Gnd


MOTOR CONNECTIONS

MOTOR PHASE CONNECTIONS

The drive output is a three-phase PWM inverter that converts the DC buss voltage (+HV) into three sinusoidal voltage waveforms that drive the motor phase-coils. Cable should be sized for the continuous current rating of the motor. Motor cabling should use twisted, shielded conductors for CE compliance, and to minimize PWM noise coupling into other circuits. The motor cable shield should connect to motor frame and the drive frame ground terminal (J6-1) for best results.

MOTOR SIGNALS

| Signal | J2 Pin |
|-----------|--------|
| Mot U | 4 |
| Mot V | 3 |
| Mot W | 2 |
| Frame Gnd | 1 |

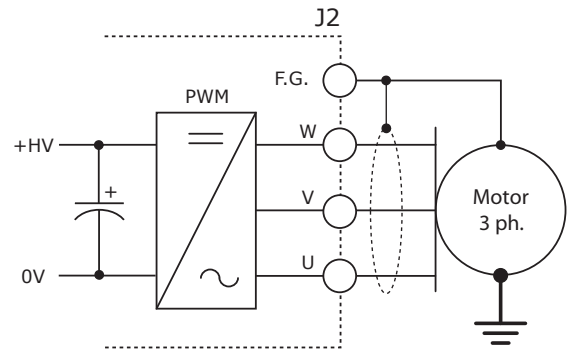


DIGITAL HALL SIGNALS

Hall signals are single-ended signals that provide absolute feedback within one electrical cycle of the motor. There are three of them (U, V, & W) and they may be sourced by magnetic sensors in the motor, or by encoders that have Hall tracks as part of the encoder disc. They typically operate at much lower frequencies than the motor encoder signals, and are used for commutation-initialization after startup, and for checking the motor phasing after the amplifier has switched to sinusoidal commutation.

HALL SIGNALS


| Signal | J5 Pins |
|-----------|---------------|
| Hall U | 2 |
| Hall V | 3 |
| Hall W | 4 |
| +5V | 6, 17 |
| Sgnd | 5, 16, 25, 26 |
| Frame Gnd | 1 |

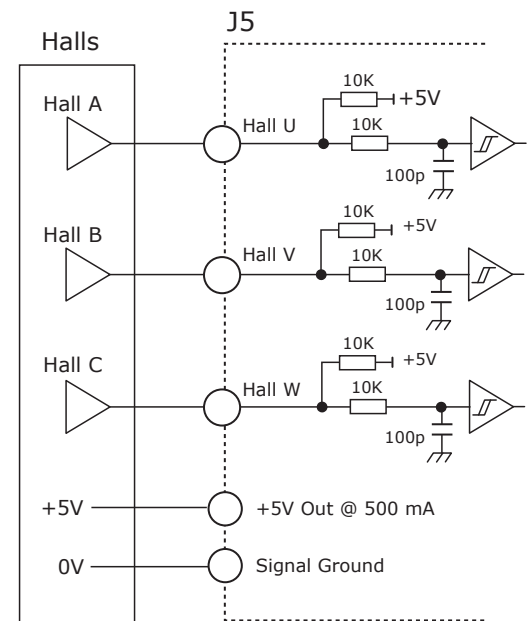

MOTOR CONNECTIONS: DIGITAL QUAD A/B ENCODERS

The connections shown may not be used in all installations

Xenus Plus Compact

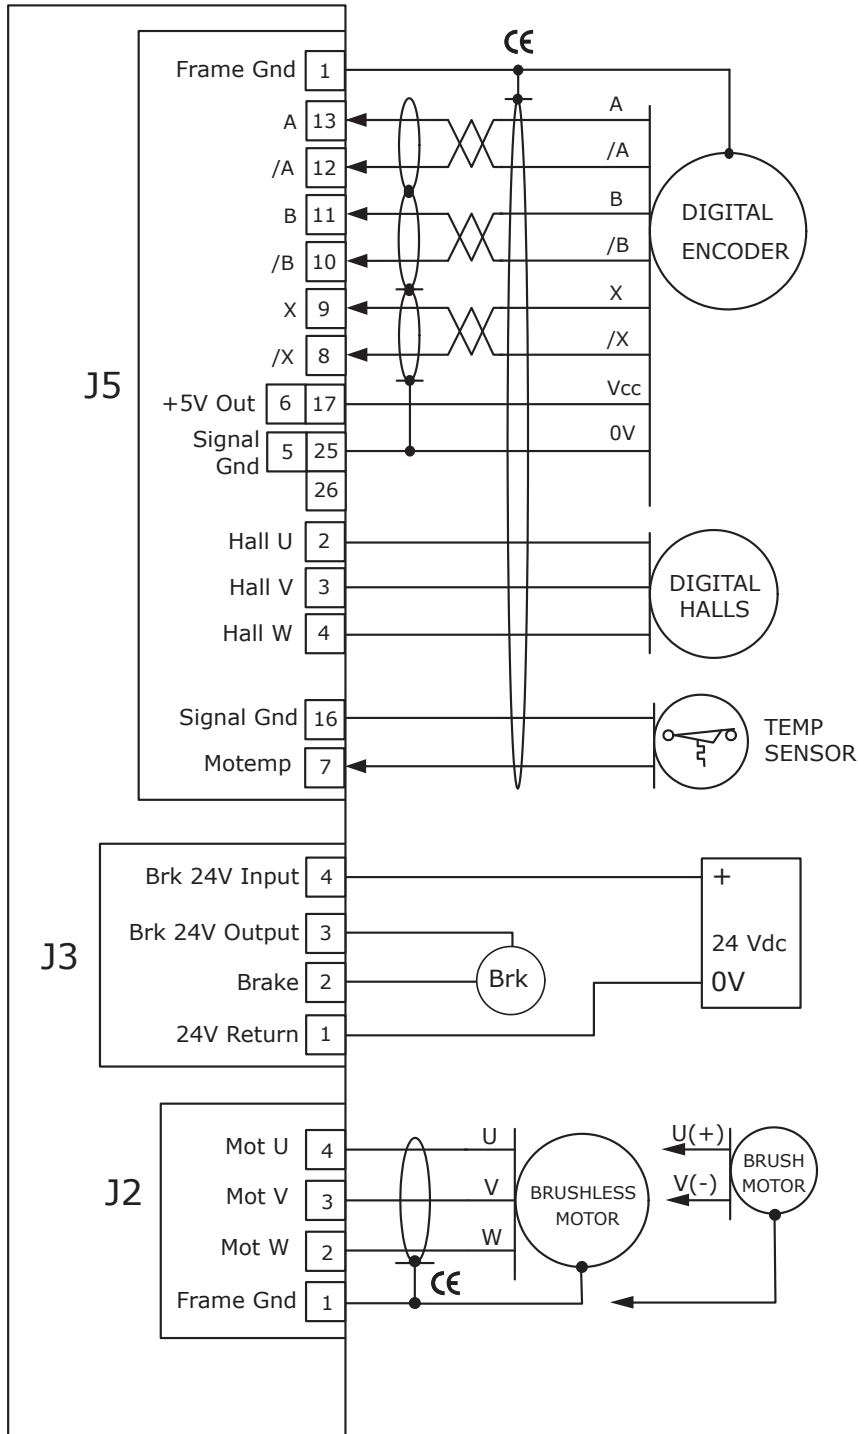


NOTES:

- 1) CE symbols indicate connections required for CE compliance.
- 2) When STO feature is used, the 24V power supply must be SELV or PELV with output voltage limited to 60 Vdc.

MOTOR CONNECTIONS: ANALOG SIN/COS INCREMENTAL ENCODERS

The connections shown may not be used in all installations

Xenus Plus Compact


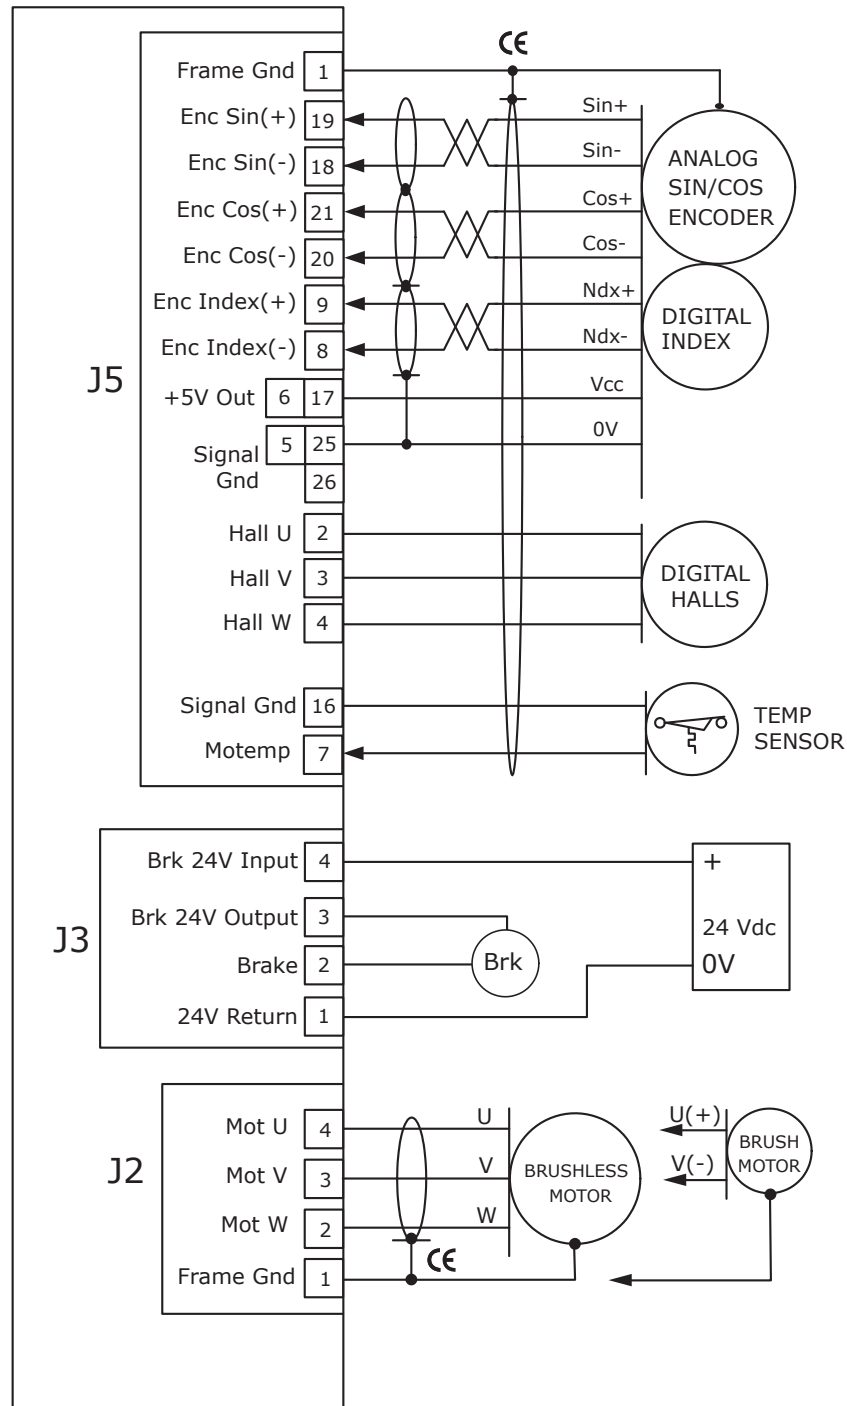


NOTES:

- 1) CE symbols indicate connections required for CE compliance.
- 2) When STO feature is used, the 24V power supply must be SELV or PELV with output voltage limited to 60 Vdc.

CONNECTORS & SIGNALS

WARNING: Hazardous voltages exist on connections to J1, & J2 when power is applied, and for up to 4 minutes after power is removed.

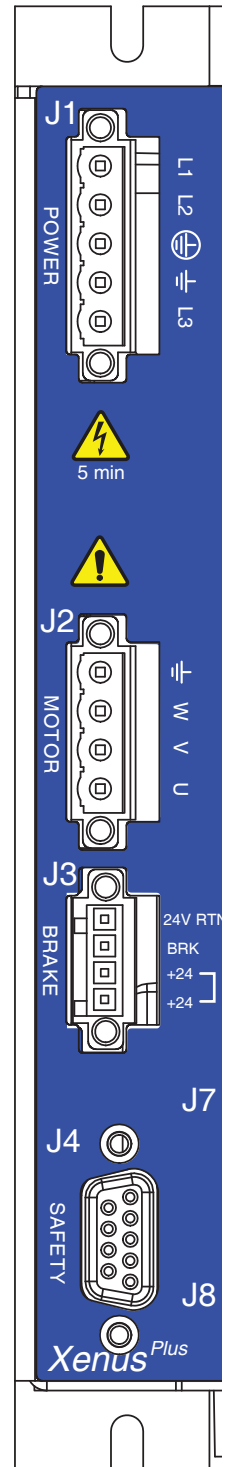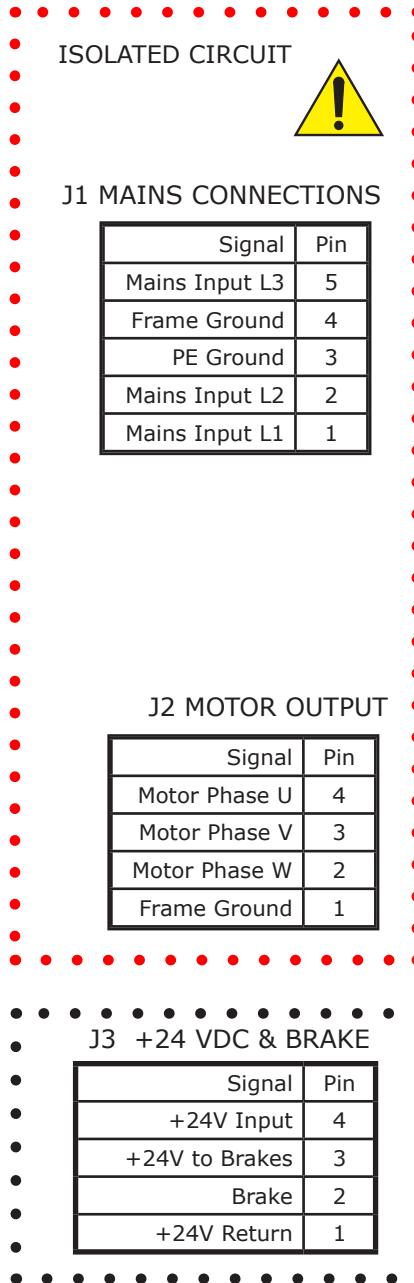

J4 SAFETY (STO)

| PIN | SIGNAL | PIN | SIGNAL |
|-----|------------|-----|------------|
| 1 | Frame Gnd | 6 | STO-IN1(+) |
| 2 | STO-IN1(+) | 7 | STO-IN1(-) |
| 3 | STO-IN1(-) | 8 | STO-Mute |
| 4 | STO-IN2(+) | 9 | STO-Gnd |
| 5 | STO-IN1(-) | | |

CONNECTORS & SIGNALS

J5 FEEDBACK

| PIN | SIGNAL | PIN | SIGNAL | PIN | SIGNAL |
|-----|-------------|-----|------------|-----|------------|
| 1 | Frame Gnd | 10 | Enc /B | 19 | Sin1(+) S3 |
| 2 | Hall U | 11 | Enc B | 20 | Cos1(-) S4 |
| 3 | Hall V | 12 | Enc /A | 21 | Cos1(+) S2 |
| 4 | Hall W | 13 | Enc A | 22 | n/c |
| 5 | Signal Gnd | 14 | Enc /S | 23 | n/c |
| 6 | +5V Out1 | 15 | Enc S | 24 | n/c |
| 7 | Motemp IN11 | 16 | Signal Gnd | 25 | Signal Gnd |
| 8 | Enc /X | 17 | +5V Out1 | 26 | Signal Gnd |
| 9 | Enc X | 18 | Sin1(-) S1 | | |

Notes:

- 1) The total current drawn from +5V Out1 on J5 cannot exceed 500 mA.
- 2) The total current drawn from +5V Out2 on J6 cannot exceed 500 mA.

J6 CONTROL & I/O

| PIN | SIGNAL | PIN | SIGNAL | PIN | SIGNAL |
|-----|------------|-----|--------------|-----|-------------|
| 1 | Frame Gnd | 16 | Signal Gnd | 31 | Signal Gnd |
| 2 | Ref1(-) | 17 | +5V Out2 | 32 | +5V Out2 |
| 3 | Ref1(+) | 18 | Multi Enc /S | 33 | Multi Enc S |
| 4 | n/c | 19 | Multi Enc /X | 34 | Multi Enc X |
| 5 | n/c | 20 | Multi Enc /B | 35 | Multi Enc B |
| 6 | Signal Gnd | 21 | Multi Enc /A | 36 | Multi Enc A |
| 7 | [IN1] GP | 22 | Signal Gnd | 37 | Signal Gnd |
| 8 | [IN2] GP | 23 | [OUT4] HS | 38 | n/c |
| 9 | [IN3] HS | 24 | n/c | 39 | n/c |
| 10 | [IN4] HS | 25 | [OUT3-] ISO | 40 | [OUT3+] ISO |
| 11 | [IN5] HS | 26 | [OUT2-] ISO | 41 | [OUT2+] ISO |
| 12 | [IN6] HS | 27 | [OUT1-] ISO | 42 | [OUT1+] ISO |
| 13 | [IN7] ISO | 28 | [INCOM] ISO | 43 | n/c |
| 14 | [IN8] ISO | 29 | n.c. | 44 | Sgnd |
| 15 | [IN9] ISO | 30 | [IN10] ISO | | |

J8 RS-232 PORT

| PIN | SIGNAL |
|-----|--------|
| 1 | n.c. |
| 2 | RxD |
| 3 | Gnd |
| 4 | Gnd |
| 5 | TxD |
| 5 | n.c. |

RJ-11 receptacle, 6 position, 4 contact


J8 CABLE CONNECTOR:

RJ-11 style, male, 6 position

Cable: 6-conductor modular type, straight-through

J8 RS-232 NOTE

1. J8 signals are referenced to Signal Gnd.

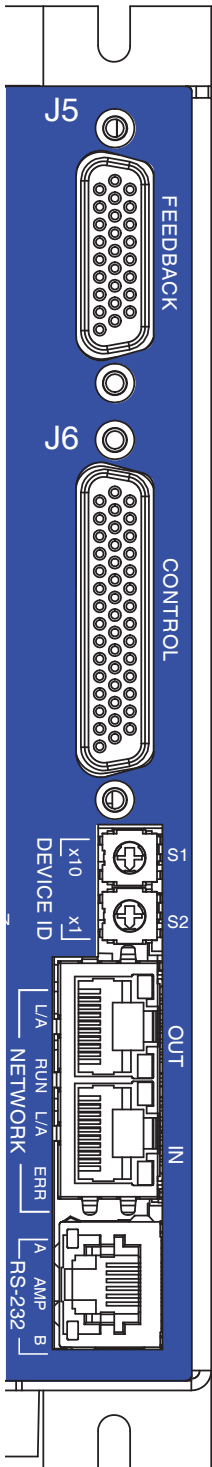


WIRING

AC POWER, AND MOTOR OUTPUT: J1, J2

Wago MCS-MIDI Classic: 231-305/107-000, 5-pole (J1), 231-304/107-000, 4-pole(J2), female connectors; with screw flange; pin spacing 5.08 mm / 0.2 in

Conductor capacity
 Bare stranded: AWG 28~14 [0.08~2.5 mm²]
 Insulated ferrule: AWG 24~16 [0.25~1.5 mm²]
 Stripping length: 8~9 mm
 Operating Tool: Wago MCS-MIDI Classic: 231-291

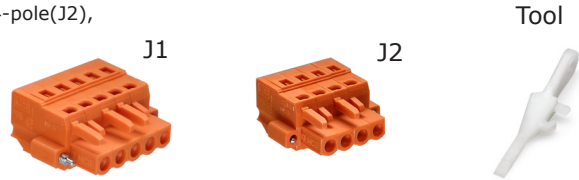


FERRULE PART NUMBERS: SINGLE WIRE INSULATED

| AWG | mm ² | Color | Mfgr | PNUM | A | B | C | D | E | SL |
|-----|-----------------|-------|------|---------|-------------|------------|------------|------------|------------|-----------|
| 14 | 2.5 | Blue | Wago | 216-206 | 15.0 (0.59) | 8.0 (0.31) | 2.05 (.08) | 4.2 (0.17) | 4.8 (0.19) | 10 (0.39) |
| 16 | 1.5 | Black | Wago | 216-204 | 14.0 (0.59) | 8.0 (0.31) | 1.7 (.07) | 3.5 (0.14) | 4.0 (0.16) | 10 (0.39) |
| 18 | 1.0 | Red | Wago | 216-223 | 12.0 (.47) | 6.0 (.24) | 1.4 (.055) | 3.0 (.12) | 3.5 (.14) | 8 (.31) |
| 20 | 0.75 | Gray | Wago | 216-222 | 12.0 (.47) | 6.0 (.24) | 1.2 (.047) | 2.8 (.11) | 3.3 (.13) | 8 (.31) |
| 22 | 0.5 | White | Wago | 216-221 | 12.0 (.47) | 6.0 (.24) | 1.0 (.039) | 2.6 (.10) | 3.1 (.12) | 7.5 (.30) |

NOTES

PNUM = Part Number
 SL = Stripping length
 Dimensions: mm (in)

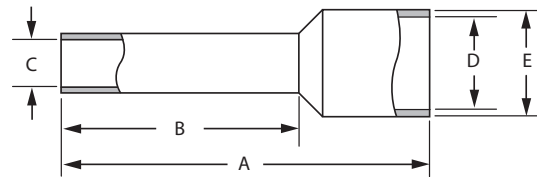

24V & BRAKE: J3

Wago MCS-MINI: 734-104/107-000, female connector; with screw flange, 4-pole; pin spacing 3.5 mm / 0.138 in

Conductor capacity
 Bare stranded: AWG 28~16 [0.08~1.5 mm²]
 Insulated ferrule: AWG 24~16 [0.25~1.5 mm²]
 Stripping length: 0.24~0.28 in [6~7 mm]
 Operating tool: Wago MCS-MINI: 734-191




FERRULE PART NUMBERS: SINGLE WIRE INSULATED

| AWG | mm ² | Color | Mfgr | PNUM | A | B | C | D | E | SL |
|-----|-----------------|-------|------|---------|------------|-----------|-----------|-----------|-----------|-----------|
| 18 | 1.0 | Red | Wago | 216-223 | 12.0 (.47) | 6.0 (.24) | 1.4 (.06) | 3.0 (.12) | 3.5 (.14) | 8 (.31) |
| 20 | 0.75 | Gray | Wago | 216-222 | 12.0 (.47) | 6.0 (.24) | 1.2 (.05) | 2.8 (.11) | 3.3 (.13) | 8 (.31) |
| 22 | 0.5 | White | Wago | 216-221 | 12.0 (.47) | 6.0 (.24) | 1.0 (.04) | 2.6 (.10) | 3.1 (.12) | 7.5 (.30) |


FERRULE PART NUMBERS: DOUBLE WIRE INSULATED

| AWG | mm ² | Color | Mfgr | PNUM | A | B | C | D | E | SL |
|--------|-----------------|-------|--------|----------|------------|-----------|------------|-----------|-----------|------------|
| 2 x 18 | 2 x 1.0 | Red | Altech | 2776.0 | 15.4 (.61) | 8.2 [.32] | 2.4 (.09) | 3.2 (.13) | 5.8 (.23) | 11.0 (.43) |
| 2 x 18 | 2 x 1.0 | Gray | Altech | 2775.0 | 14.6 (.57) | 8.2 (.32) | 2.0 (.08) | 3.0 (.12) | 5.5 (.22) | 11.0 (.43) |
| 2 x 20 | 2 x 0.75 | White | Altech | 2794.0 | 14.6 (.57) | 8.2 (.32) | 1.7 (.07) | 3.0 (.12) | 5.0 (.20) | 11.0 (.43) |
| 2 x 20 | 2 x 0.75 | Gray | TE | 966144-2 | 15.0 (.59) | 8.0 (.31) | 1.70 (.07) | 2.8 (.11) | 5.0 (.20) | 10 (.39) |
| 2 x 22 | 2 x 0.50 | White | TE | 966144-1 | 15.0 (.59) | 8.0 (.31) | 1.40 (.06) | 2.5 (.10) | 4.7 (.19) | 10 (.39) |

SINGLE WIRE

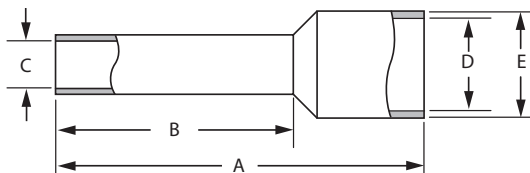

DOUBLE WIRE

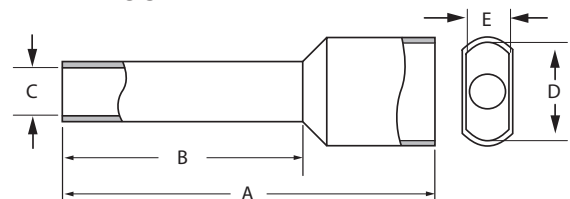

DEVICE STRUCTURE & ISOLATION

DRIVE POWER SOURCES

- There are four isolation zones in the XPC:
1. +24V, Brake, & STO
 2. Control circuits, RS-232 & CAN comms
 3. High-voltage, regen, & PWM outputs
 4. CANopen communications

Each of these is isolated from the others and all are isolated from the chassis.

+24 VDC, BRAKE, & STO

The primary side of the DC/DC converter operates directly from the external +24 Vdc supply and is isolated from other drive power sections. Secondary windings provide power for each isolation zone. The Brake output [OUT6] operates in this section and is referenced to the +24 Vdc return (0V). It sinks current from an external load connected to the external +24 Vdc power source. The STO circuits also operate from the 24V power and the STO-24V supplies current for de-activating (muting) the STO function when it is not used.

SIGNAL AND RS-232 CIRCUITS

The signal power section supplies power for the control circuits as well as the RS-232 communications. Motor feedback signals such as Halls, encoder, and temperature sensor operate in this section. All signal circuits are referenced to Signal Ground. This ground should connect to the control system circuit ground or common so that drive and controller inputs and output voltage levels work properly with each other.

HIGH VOLTAGE, REGEN, & PWM

Mains power drives the high-voltage section. It is rectified and capacitor-filtered to produce internal DC bus which the PWM stage converts into voltages that drive either three phase brushless or DC brush motors. An internal solid-state switch and power resistor provides dissipation during regeneration. All the circuits in this section are "hot", that is, they connect directly to the mains and must be considered high-voltages and a shock hazard requiring proper insulation techniques during installation.

CAN NETWORK

The network connections in the CAN network receptacle are optically isolated from the other drive circuits.


GROUNDING

A grounding system has three primary functions: safety, voltage-reference, and shielding. As a safety measure, the PE (Protective Earth) ground at J1-3 will carry fault-currents from the mains in the case of an internal failure or short-circuit of electronic components. Wiring to this is typically done with the green conductor with yellow stripe using the same gauge wire as that used for the mains. This wire is a 'bonding' conductor that should connect to an earthed ground point and must not pass through any circuit interrupting devices. *All of the circuits on J1, and J2 are mains-connected and must never be grounded.* The frame ground terminals at J1-3, J1-4, J2-1, J4-1, J5-1, and J6-1 all connect to

the drive chassis and are isolated from all drive internal circuits.


Signal grounding references the drive control circuits to those of the control system. These controls circuits typically have their own earth connection at some point. To eliminate ground-loops it is recommended that the drive signal ground be connected to the control system circuit ground. When this is done the drive signal voltages will be referenced to the same 0 V level as the circuits in the control system. Small currents flow between controller and drive when inputs and outputs interact. The signal ground is the path for these currents to return to their power sources in both controller and drive.

Shields on cables reduce emissions from the drive for CE compliance and protect internal circuits from interference due to external sources of electrical noise. Because of their smaller wire gauge, these should not be used as part of a safety-ground system. Motor cases can be safety-grounded either at the motor, by earthing the frame, or by a grounding conductor in the motor cable that connects to J2-1. This cable should be of the same gauge as the other motor phase cables.

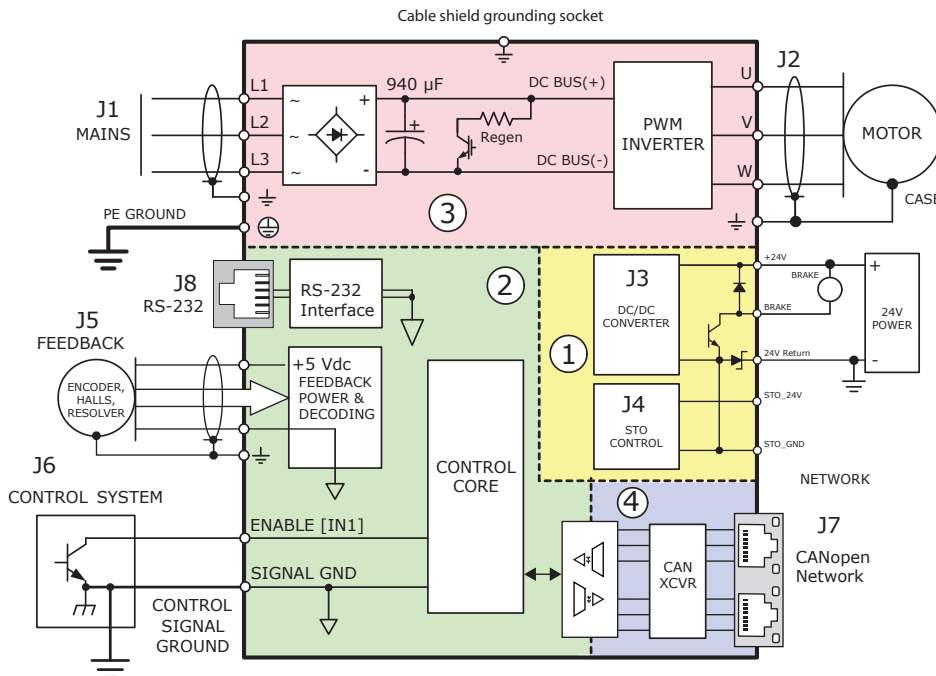

REGENERATION

The chart below shows the energy absorption in W·s for a XPC drive operating at some typical mains voltages. When the load mechanical energy is greater than these values an external regen resistor is available as an accessory.

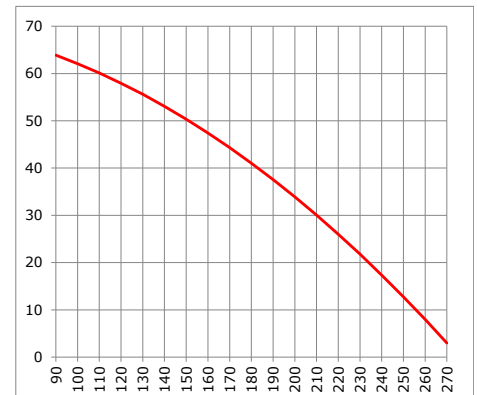

REGENERATION

The drive has an internal regen resistor which can handle regenerative energy that exceeds the absorption capacity of the internal bus capacitance. The internal regen resistor will be switched on when the energy shown in the table has been absorbed and the bus voltage driven up to 390 Vdc at which point the internal regen resistor will be switched to absorb the kinetic energy of the load.

ABSORPTION

| Vac | E |
|-----|----|
| 100 | 62 |
| 120 | 58 |
| 200 | 34 |
| 240 | 17 |

Absorption is the energy that can be transferred to the 940 uF internal capacitance during deceleration. This table shows the energy absorption in W·s for a drive operating at some typical mains voltages. If the deceleration energy is less than the absorption capacity of the drive, then the regeneration resistor will not be switched-on because the bus voltage will not rise enough to hit the over-voltage level that would disable the PWM outputs.

Terms:

| | | |
|---|--------------------------|----------------------|
| E | Energy | Joules, Watt-seconds |
| J | Rotary Moment of Inertia | kg·m ² |
| P | Power | Watts |

CALCULATING THE REGEN REPETITION FREQUENCY

Step 1: Find the energy of motion for a rotating load, for this example let it be 75 Joules:

$$E = \frac{J * RPM^2}{182} = 75 \text{ J} \quad \text{Joules; kg·m}^2, \text{ RPM}$$

Step 2: Subtract the absorption at your mains voltage to get the energy that must be dissipated in the regen resistor. Use 240 Vac:


$$75 \text{ J} - 17 \text{ J} = 58 \text{ J} \quad \text{Joules; Joules}$$

Step 3: Divide the regen energy by the continuous power rating of 20 Watts to get the dwell time that can dissipate the regen energy in the resistor:

$$\text{Dwell Time} = \frac{58 \text{ Joules}}{20 \text{ Watts}} = 2.9 \text{ sec} \quad \text{Seconds; Joules, Watts}$$


Step 4: Find the total regen cycle time by adding the deceleration time to the dwell time:

$$\begin{aligned} \text{Decel Time} &= 1.25 \text{ sec} \\ \text{Dwell Time} &= 2.90 \text{ sec} \\ \text{Cycle Time} &= 4.15 \text{ sec} \end{aligned}$$



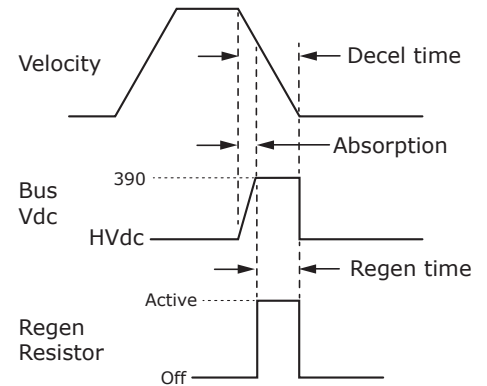


INTERNAL REGEN RESISTOR

| | |
|-------------------|-------------|
| Max Energy | 248 W·s (J) |
| Resistance | 60 Ω |
| Power, continuous | 20 W |
| Power, peak | 2500 W |
| Time | 100 ms |

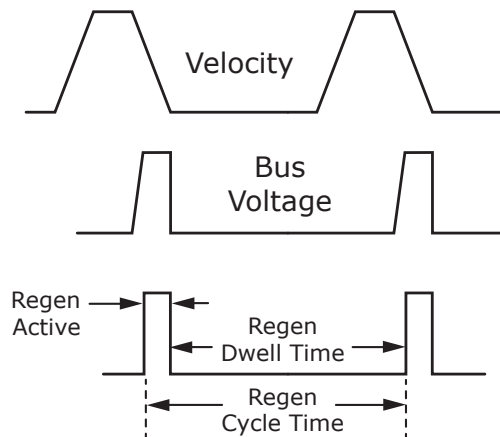

DIMENSIONS [IN/MM]

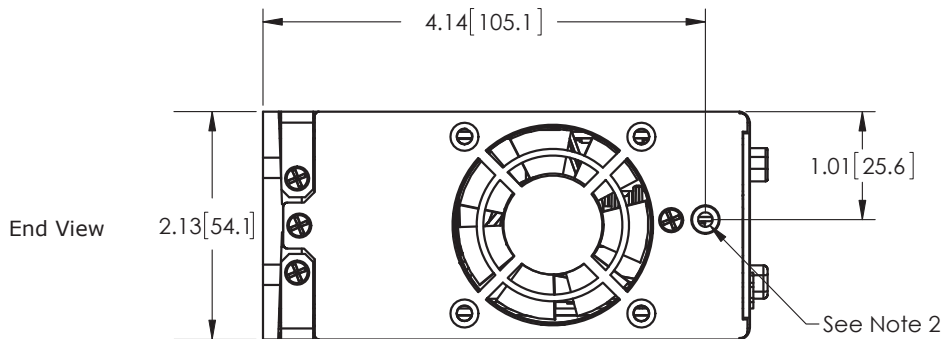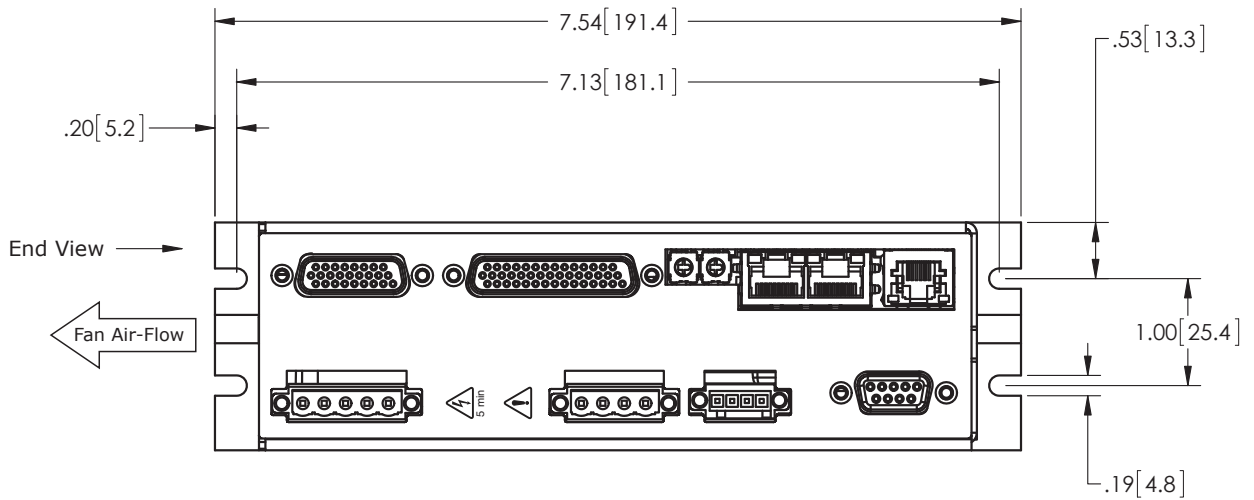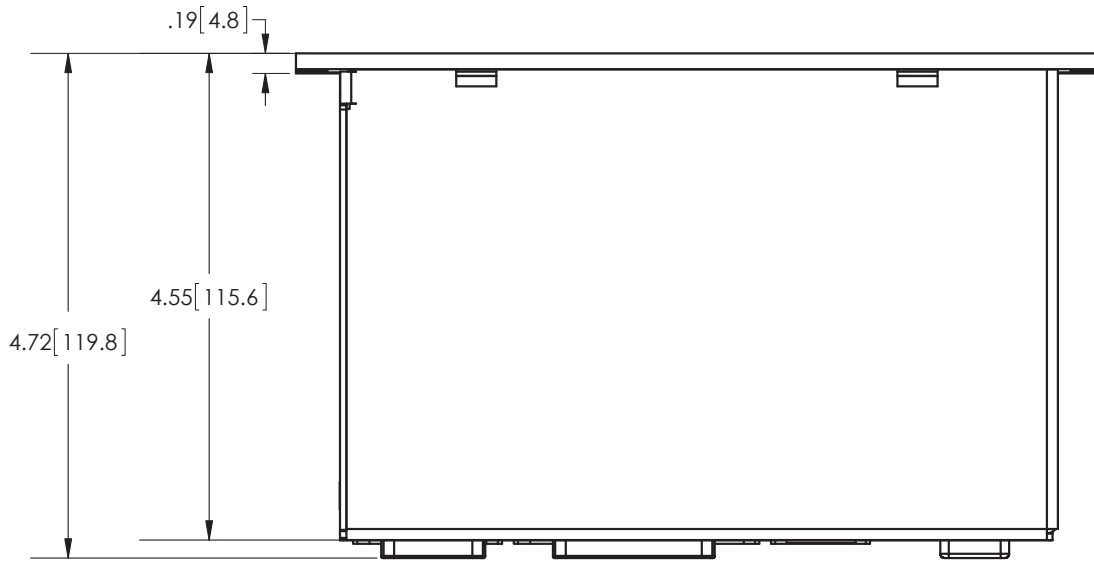


Notes:

- 1) Recommended screws for mounting slots: #8-32 or M4 external tooth SEMS
- 2) Cable shield grounding socket: #8-32 external tooth SEMS

INSTALLATION

The graphic below shows the recommended mounting for multiple drives. The clearances shown are minimums.

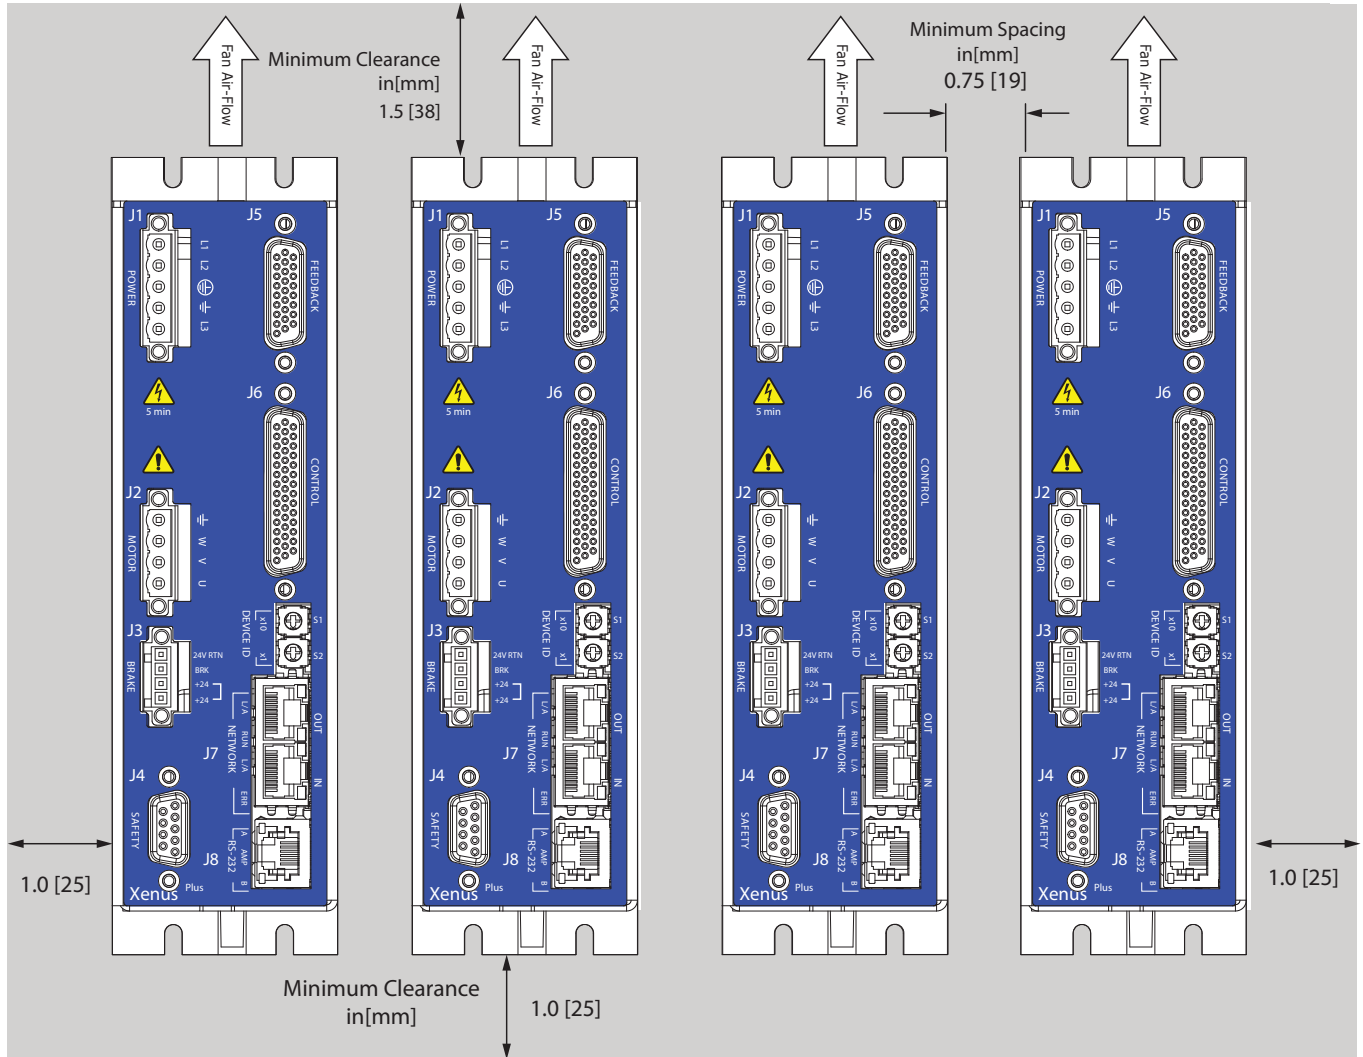

ORDERING INFORMATION

ORDERING GUIDE

| | |
|------------|-----------------------------|
| XPC-230-09 | XPC Servo Drive, 3/9 Adc |
| XPC-230-12 | XPC Servo Drive, 6/12 Adc |
| XPC-230-15 | XPC Servo Drive, 7.5/15 Adc |



Example: Order one *Xenus Plus Compact* drive, 6/12 A with connector Kit, and serial cable kit:
 Qty Item Remarks
 1 XPC-230-12 *Xenus Plus Compact* servo drive
 1 XPC-CK Connector Kit
 1 SER-CK Serial Cable Kit

ACCESSORIES

| | Qty | Ref | Name | Description | Manufacturer P/N |
|--------------------------------|-----|--------------|-----------|---|--------------------------------|
| XPC-CK Connector Kit | 1 | J1 | AC Pwr | Plug, 5 position, 5.08 mm, female | Wago: 231-305/107-000 (Note 1) |
| | 1 | | | Strain relief, snap-on, 5.08 mm, 5 position, orange | Wago: 232-635 |
| | 1 | J2 | Motor | Plug, 4 position, 5.08 mm, female | Wago: 231-304/107-000 (Note 1) |
| | 1 | | | Strain relief, snap-on, 5.08 mm, 4 position, orange | Wago: 232-634 |
| | 1 | J1, J2 | Tool | Tool, wire insertion & extraction, 231 series | Wago: 231-159 |
| | 1 | J3 | Brake | Plug, 4 position, 3.5 mm, female | Wago: 734-104/107-000 (Note 1) |
| | 1 | | | Strain relief, snap-on, 3.5 mm, 5 position, grey | Wago: 734-604 |
| | 1 | J5 | Tool | Tool, wire insertion & extraction, 734 series | Wago: 734-231 |
| | 1 | J4 Note 2 | Safety | Connector, DB-9M, 9-position, standard, male | TE/AMP: 205204-4 |
| | 9 | | | AMPLIMITE HD-20 Crimp-Snap contacts, 24-20AWG, AU flash | TE/AMP: 66506-9 |
| | 1 | | | Metal Backshell, DB-9, RoHS | 3M: 3357-9209 |
| | 4 | | | Jumper, with pins crimped on both ends | Copley: 10-75177-01 |
| | 1 | J5 | Feed-back | Connector, high-density DB-26M, 26 position, male, solder cup | Norcomp: 180-026-103L001 |
| | 1 | | | Metal Backshell, DB-15, RoHS | 3M: 3357-9215 |
| | 1 | J6 | Control | Connector, high-density DB-44M, 44 position, male, solder cup | Norcomp: 180-044-103L001 |
| | 1 | | | Metal Backshell, DB-25, RoHS | 3M: 3357-9225 |
| XPC-NC-10 | 1 | J7 | Network | CAN network cable, 10 ft (3 m) | |
| XPC-NC-01 | 1 | | | CAN network cable, 1 ft (0.3 m) | |
| SER-CK | 1 | J8 | RS-232 | Serial Cable Kit | |

Note 1: For RoHS compliance, append "/RN01-0000" to the Wago part numbers listed above

Note 2: Insertion/extraction tool for J6 contacts is AMP/Tyco 91067-2 (not included in XPC-CK)

16-01436 Document Revision History

| Revision | Date | Remarks |
|----------|-----------------|-------------------------------------|
| 00 | April 8, 2016 | Initial released version |
| 01 | October 2, 2016 | Shutdown temperature changed to 85C |
| | | |
| | | |

Note: Specifications subject to change without notice